


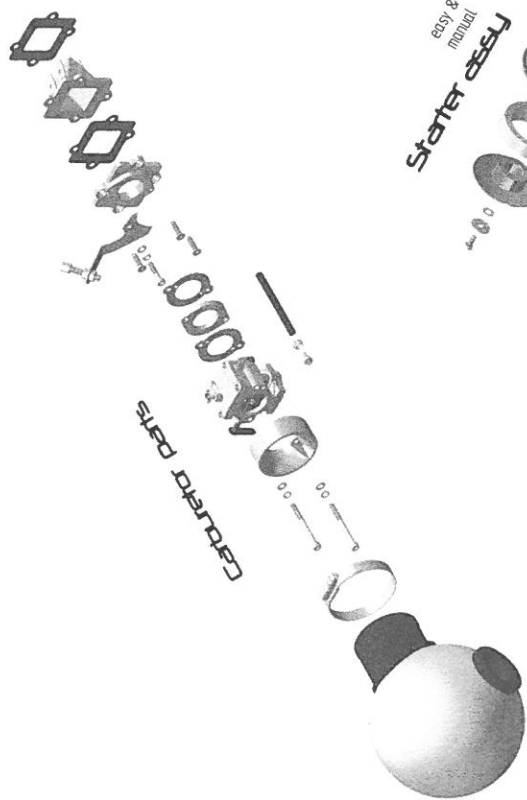
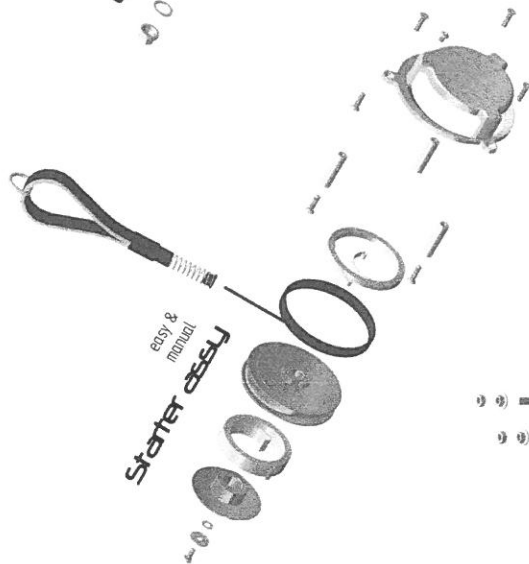
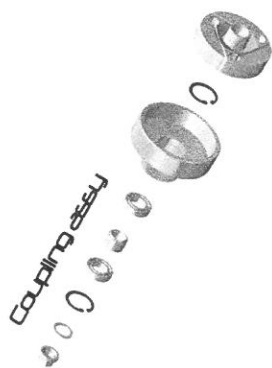
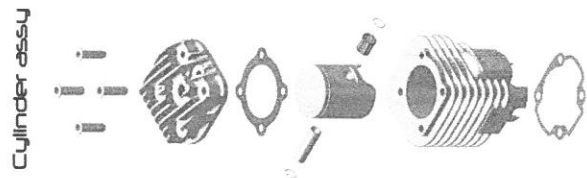
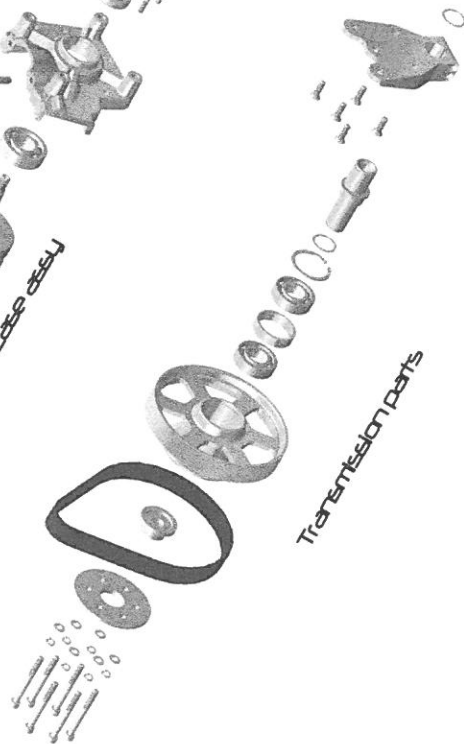


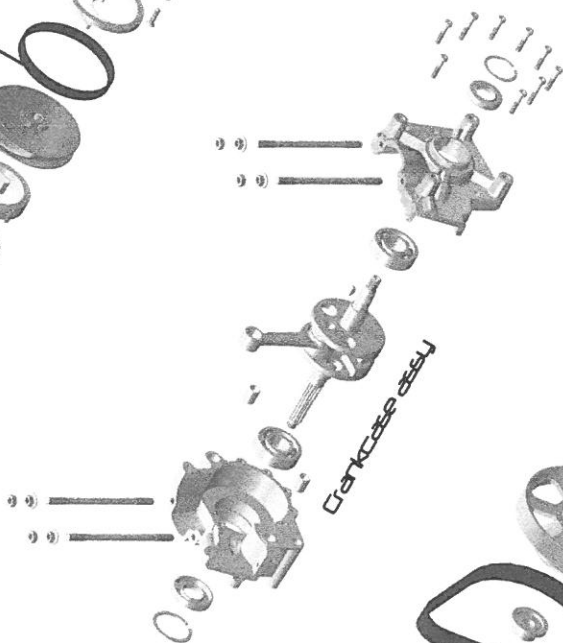

Mounting plate parts

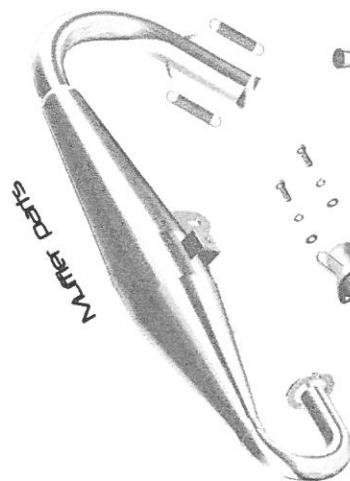

ATR 001 SCREW

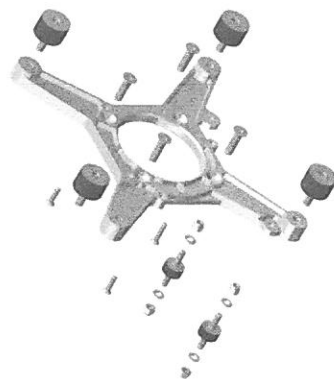

ATR 003 WASHER



ATR 002 SPRING RING




ATR 005 DRIVE BELT



ATR 004 FLANGE



ATR 006 CENTER BOLT

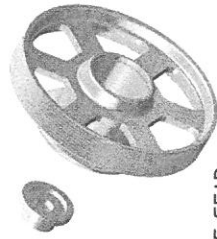

ATR 008 BALL BEARING



ATR 007 DRIVE GEAR



ATR 008 BALL BEARING



ATR 009 SPACER



ATR 010 LOCK RING bore



ATR 011 LOCK RING shaft



ATR 013 SCREW



ATR 012 ECCENTRIC SHAFT



ATR 014 MOUNTING BRACKET






ATR 015 SCREW




ATR 016 LOCK RING shaft



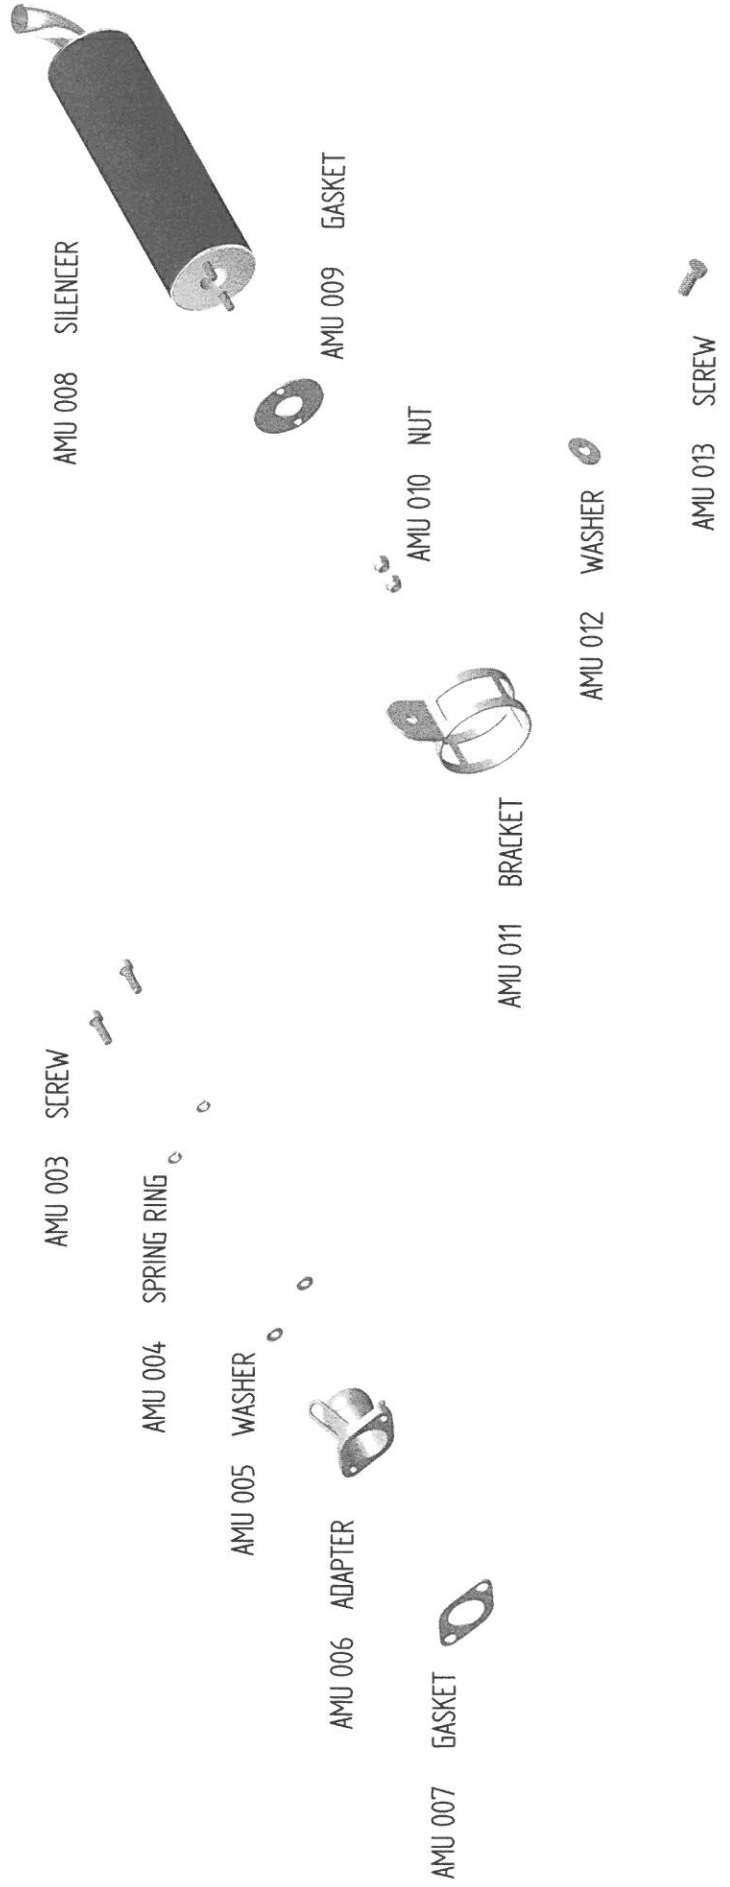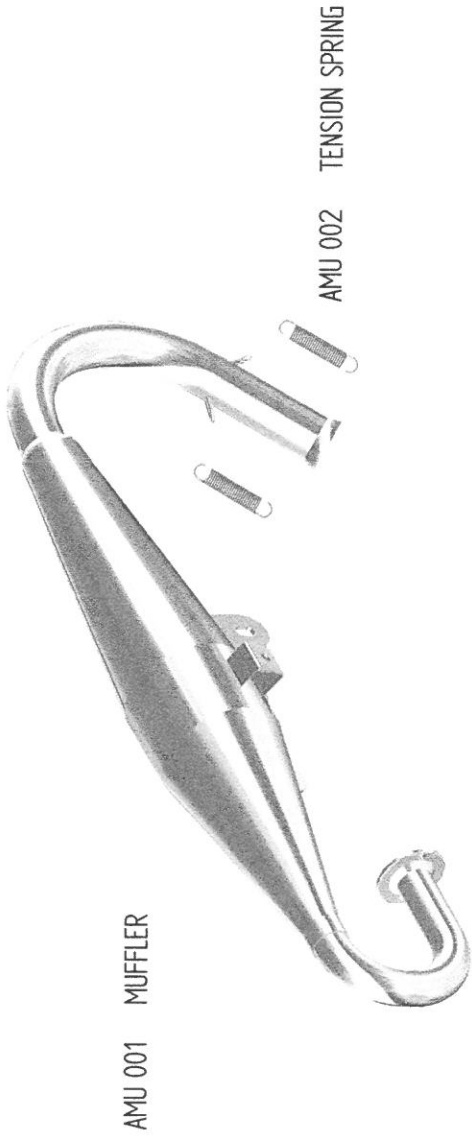

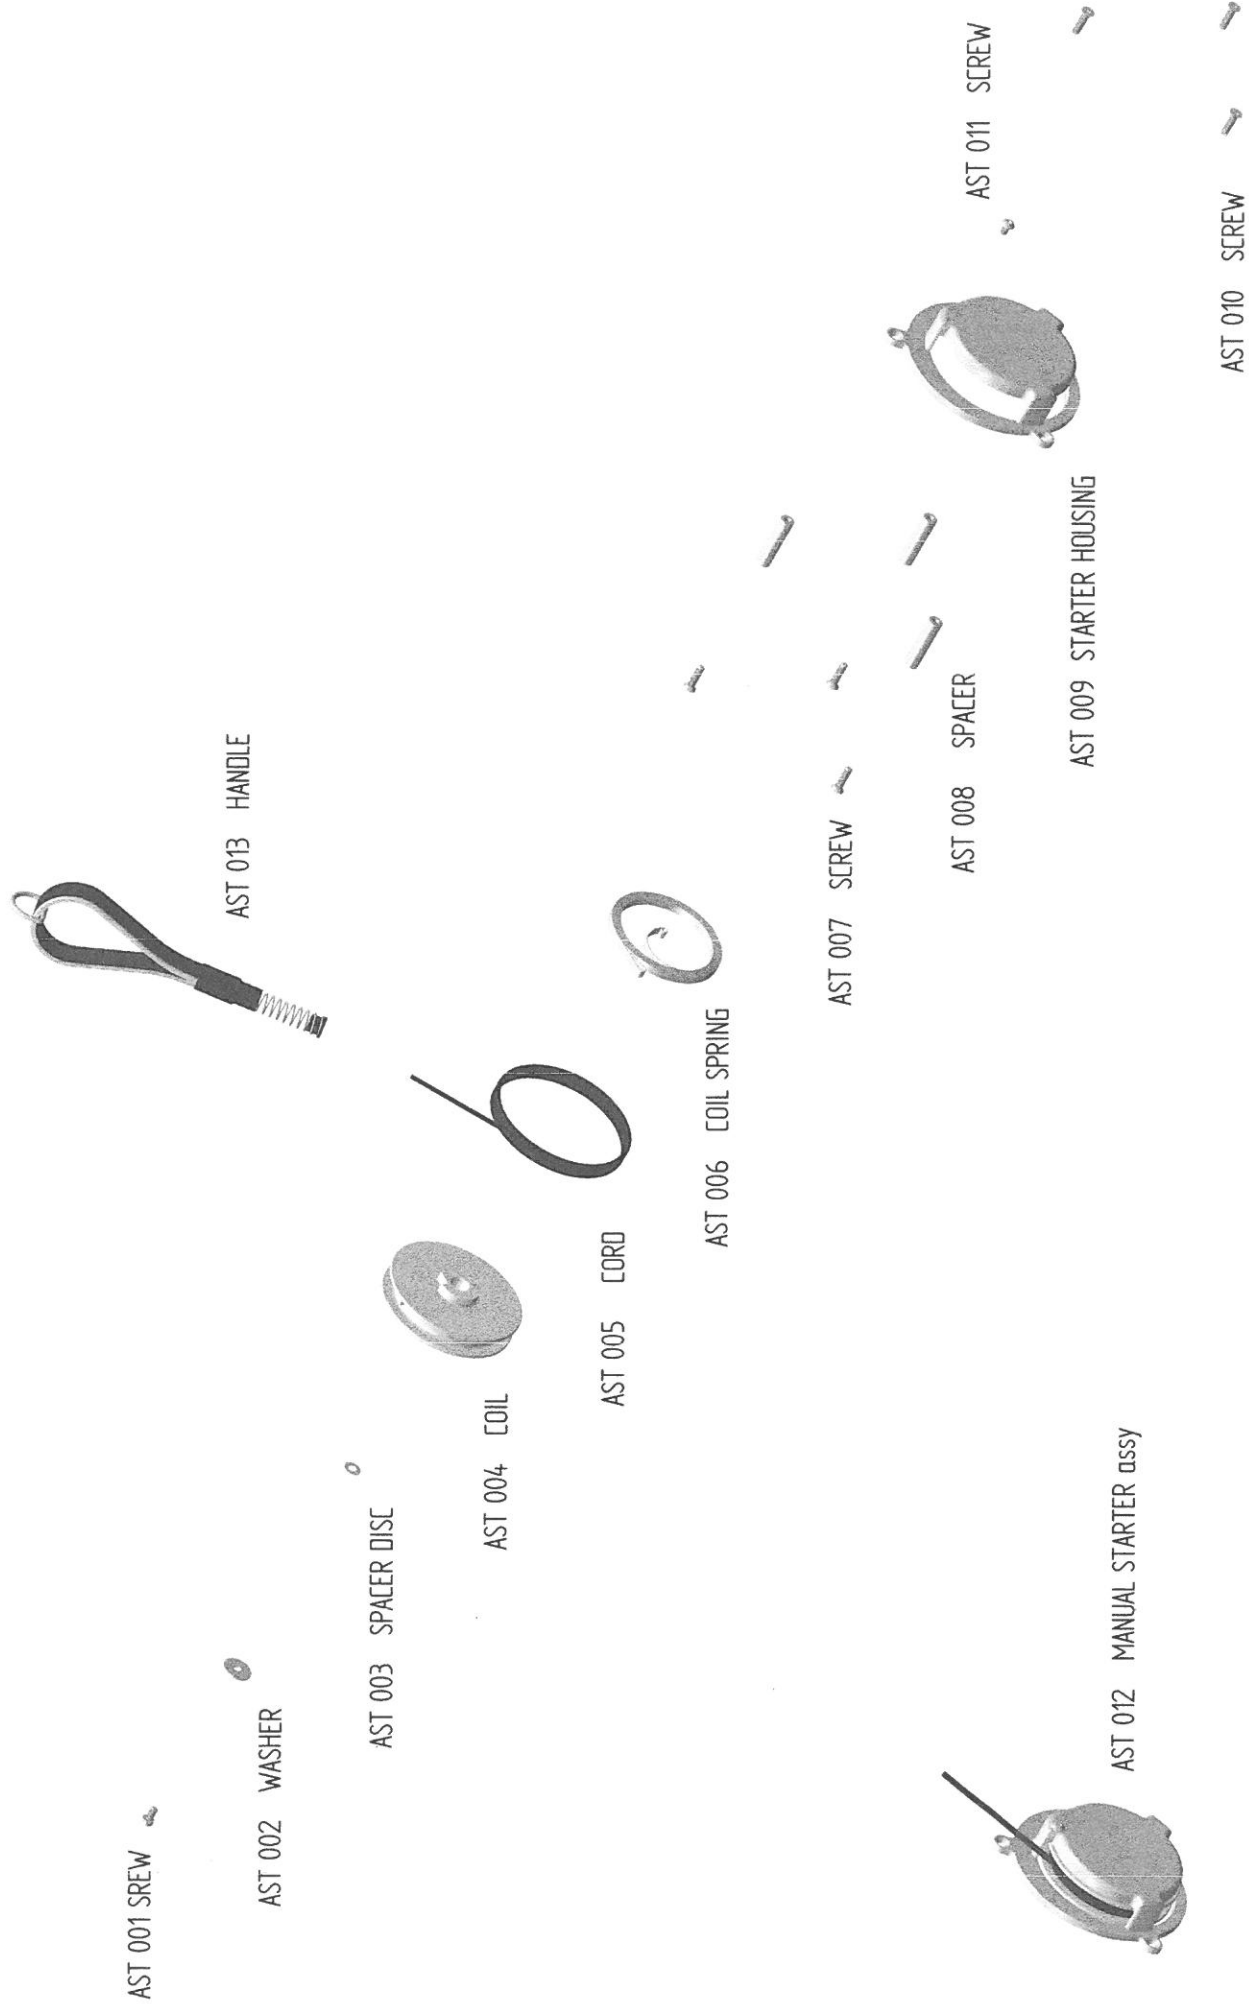

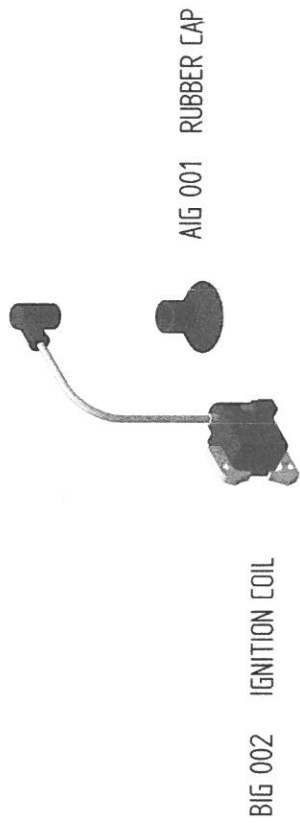

BIG 002 IGNITION COIL

AIG 001 RUBBER CAP



AIG 003 SPARK PLUG



AIG 006 MAGNET WHEEL



AIG 004 SPRING RING



AIG 005

SCREW



AIG 007 WASHER



AIG 008 NUT

AST 001 SREW

AST 002 WASHER

AST 003 SPACER DISC

AST 004 COVER

AST 005 COIL SPRING outside

AST 007 COIL

AST 008 CORD

AST 009 COIL SPRING inside

AST 010 SREW

AST 011 SPACER

AST 013 SREW

AST 014 EASY STARTER assy

AST 012 STARTER HOUSING

AST 010 SREW




ACY 001 BUSHING



ACY 002 CYLINDER HEAD




ACY 003 SEAL

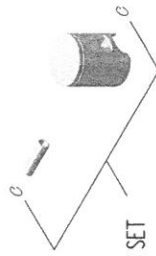

ACY 004 PISTON SET



ACY 005 SMALL END BEARING

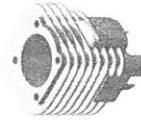

ACY 006 CYLINDER



ACY 007 SEAL

ACO 001 NUT 

ACO 002 SHIM RING 

ACO 003 LOCK RING bore 

ACO 004 BALL BEARING 

ACO 005 DISTANCE BUSH 

ACO 004 BALL BEARING 

ACO 006 COUPLING BELL 

ACO 003 LOCK RING bore 

ACO 007 CLUTCH HUB 



