


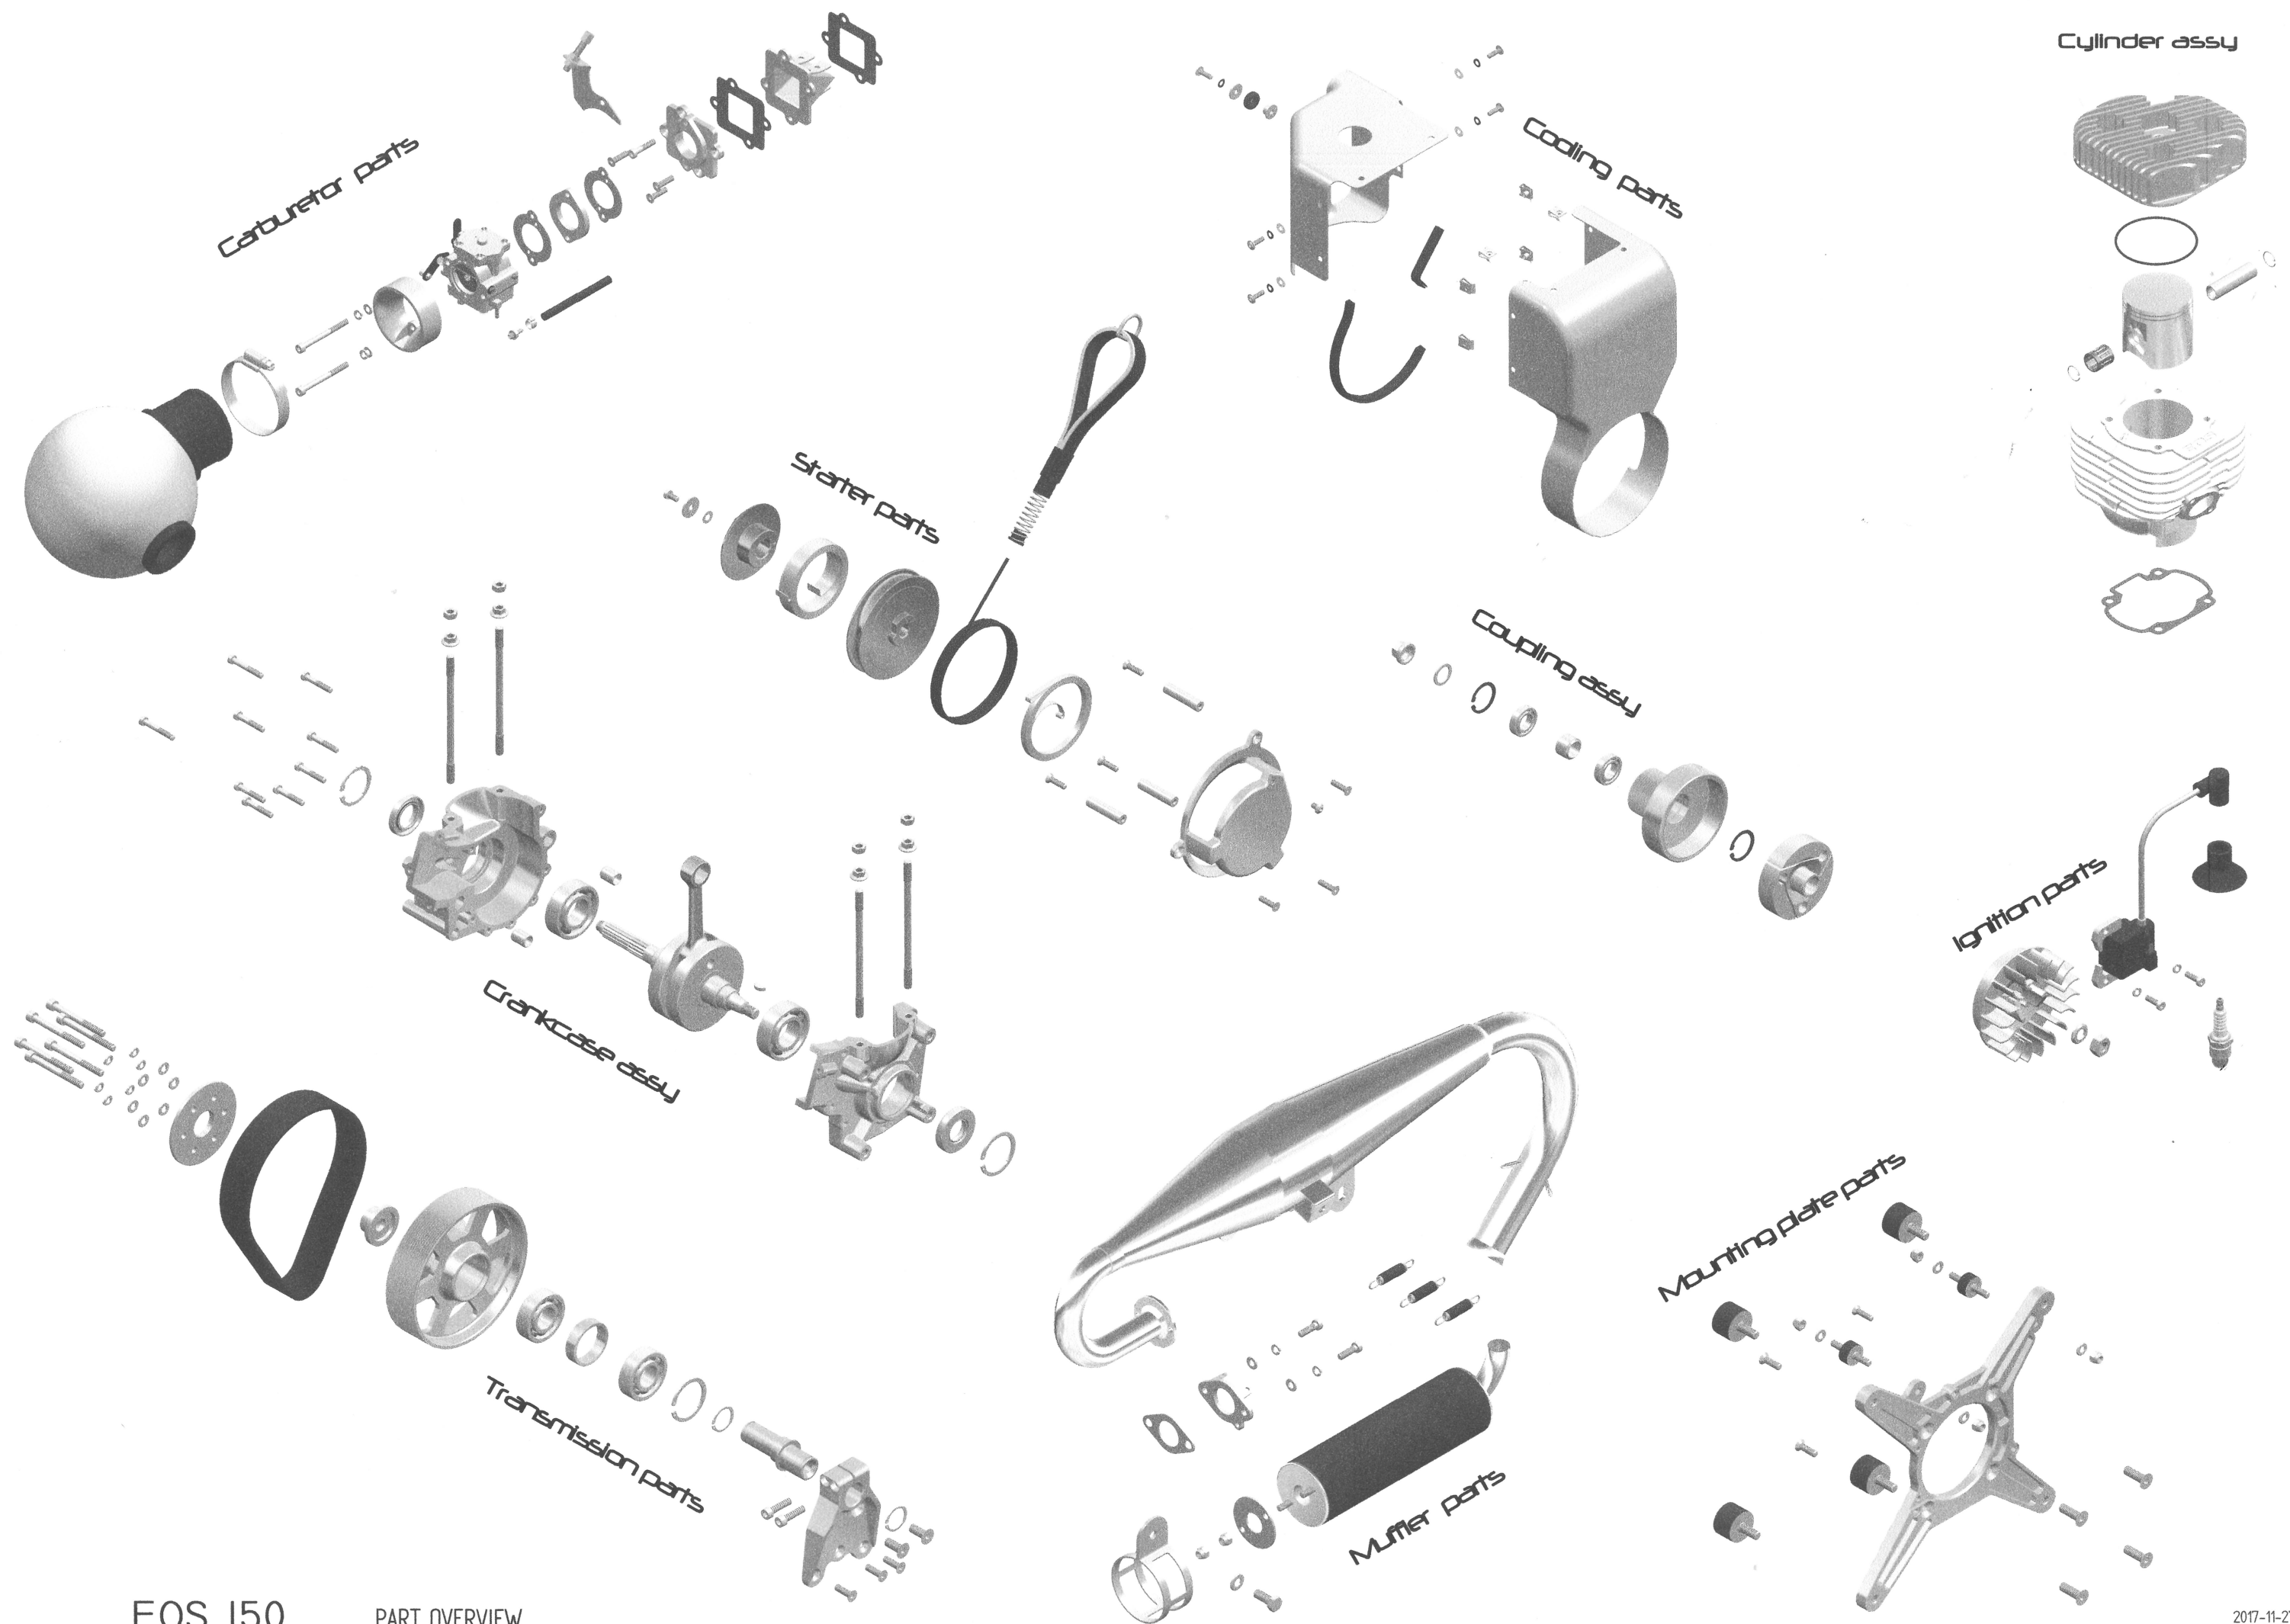

BTR 001 SCREW



BTR 002 SPRING RING



BTR 003 WASHER



BTR 004 FLANGE



BTR 006 DRIVE BELT



BTR 005 Center Bolt



BTR 008 DRIVE GEAR



BTR 009 SPACER



BTR 007 BALL BEARING



BTR 007 BALL BEARING



BTR 010 LOCK RING bore



BTR 011 LOCK RING shaft



BTR 012 ECCENTRIC SHAFT



BTR 013 MOUNTING BRACKET



BTR 015 SCREW



BTR 014 SCREW



BTR 017 SCREW



BTR 016 LOCK RING shaft



BST 001 SREW



BST 002 WASHER



BST 003 SPACER DISC



BST 004 COVER



BST 005 COIL SPRING outside



BST 007 COIL



BST 008 CORD



BST 009 COIL SPRING inside



BST 010 SCREW



BST 011 SPACER




BST 012 STARTER HOUSING



BST 013 SCREW




BST 010 SCREW

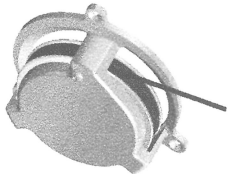


BST 014 STARTER assy


BST 006 HANDLE

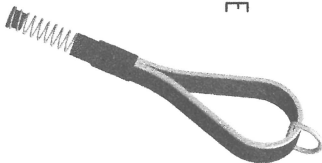

BMU 001 MUFFLER

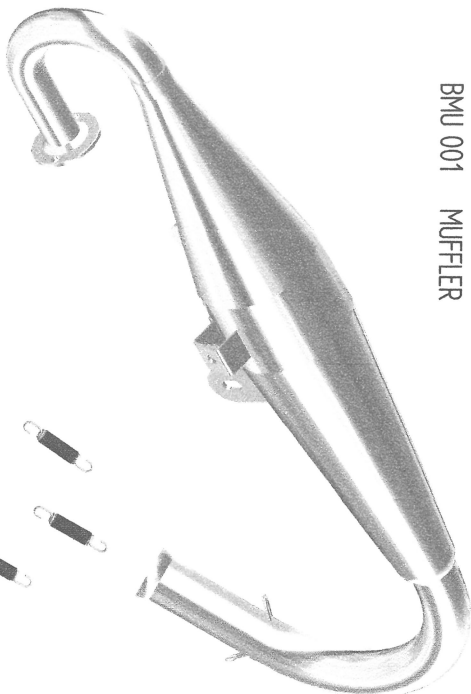

BMU002 TENSION SPRING

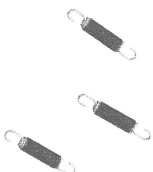

BMU 009 SCREW



BMU 010 SPRING RING



BMU 012 ADAPTER




BMU 011 WASHER



BMU 013 GASKET



BMU 003 SILENCER

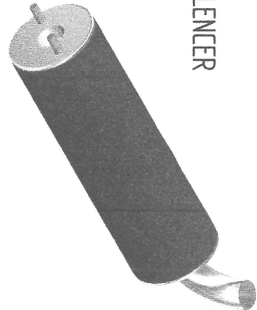

BMU 005 NUT



BMU 004 GASKET



BMU 006 WASHER




BMU 007 BRACKET



BMU 008 SCREW




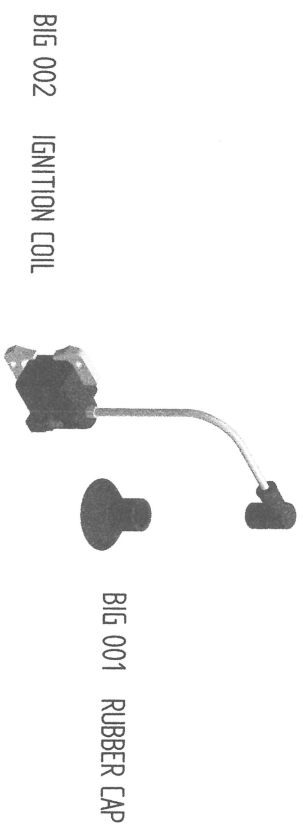

BCY 001 CYLINDER HEAD



BCY 002 O-RING

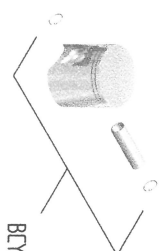


BCY 004 SMALL END BEARING



BCY 003 PISTON SET

BCY 005 CYLINDER

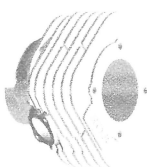

BCY 006 SEAL



BCD 001 NUT 

 BCD 002 SHIM RING

BCD 003 LOCK RING bore 

 BCD 004 BALL BEARING

BCD 005 DISTANCE BUSH 

 BCD 004 BALL BEARING


BCD 006 COUPLING BELL



 BCD 003 LOCK RING bore

BCD 007 CLUTCH HUB



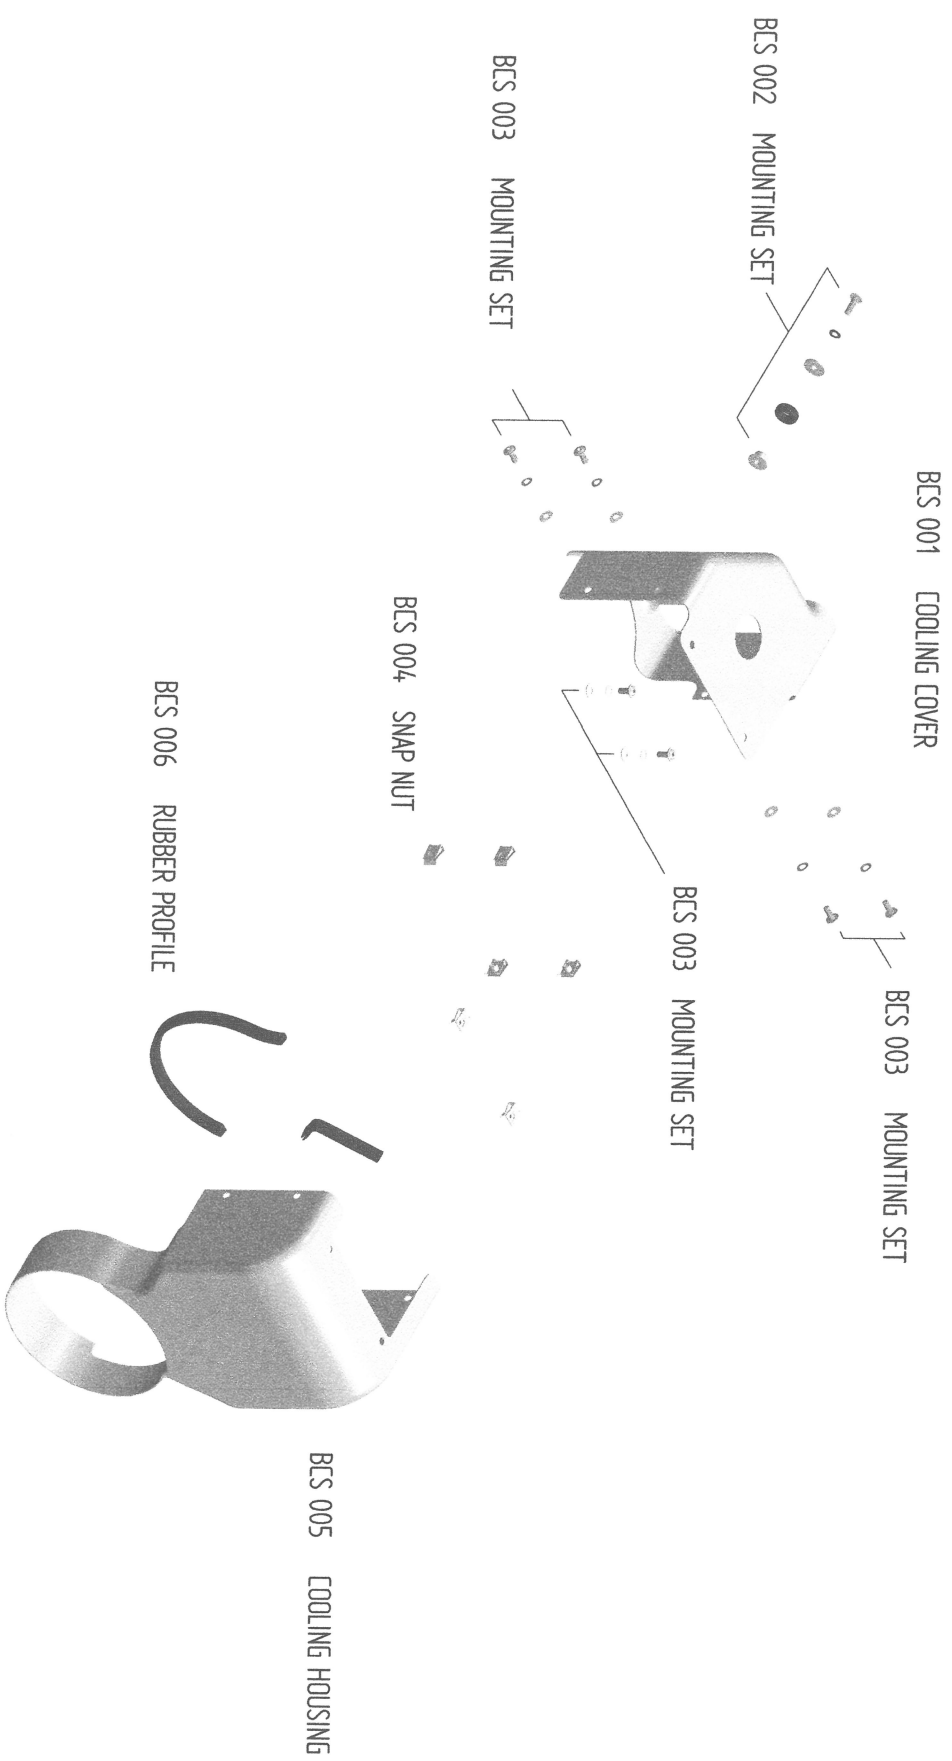

BCA 016 HOSE CLAMP



BCA 001 GASKET




BCA 001 GASKET



BCA 002 INTAKE VALVE



BCA 004 BRACKET-throttle cable

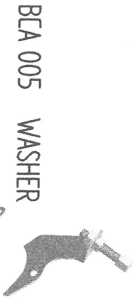

BCA 006 SPRING RING



BCA 003 ADAPTOR-carburettor



BCA 007 SCREW



BCA 009 GASKET



BCA 008 SCREW



BCA 009 GASKET



BCA 010 ISOLATING PLATE



BCA 011 CARBURETTOR-assy



BCA 012 ADAPTOR-airbox



BCA 005 WASHER



BCA 014 TUBE-set



BCA 006 SPRING RING



BCA 013 SCREW



BMP 001 RUBBER PUFFER



BMP 002 NUT




BMP 003 WASHER



BMP 004 RUBBER PUFFER



BMP 005 MOUNTING PLATE

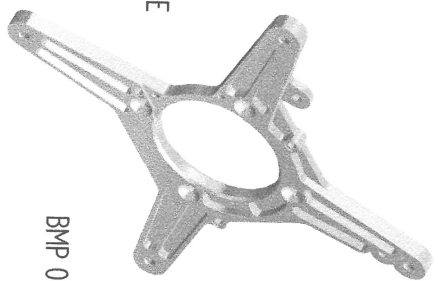

BMP 003 WASHER



BMP 002 NUT



BMP 006 SCREW



EOS 150 MOUNTING PLATE PARTS

BCR 004 LOCK RING-bore



BCR 005 SEAL RING



BCR 006 SCREW



BCR 007 SCREW



 
BCR 001 NUT




BCR 002 NUT



BCR 003 STUD



BCR 008 CRANKCASE-LH

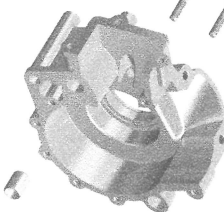


BCR 009 CENTER SLEEVE



BCR 010 BALL BEARING



BCR 011 CRANKSHAFT

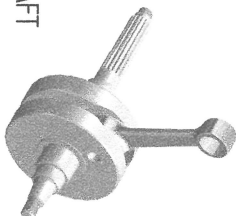


BCR 012 WOODRUFF KEY



BCR 010 BALL BEARING



BCR 014 CRANKCASE-RH

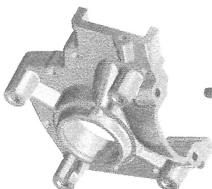

BCR 001 NUT



BCR 002 NUT



BCR 003 STUD



BCR 013 SEAL RING



BCR 015 LOCK RING-bore

