

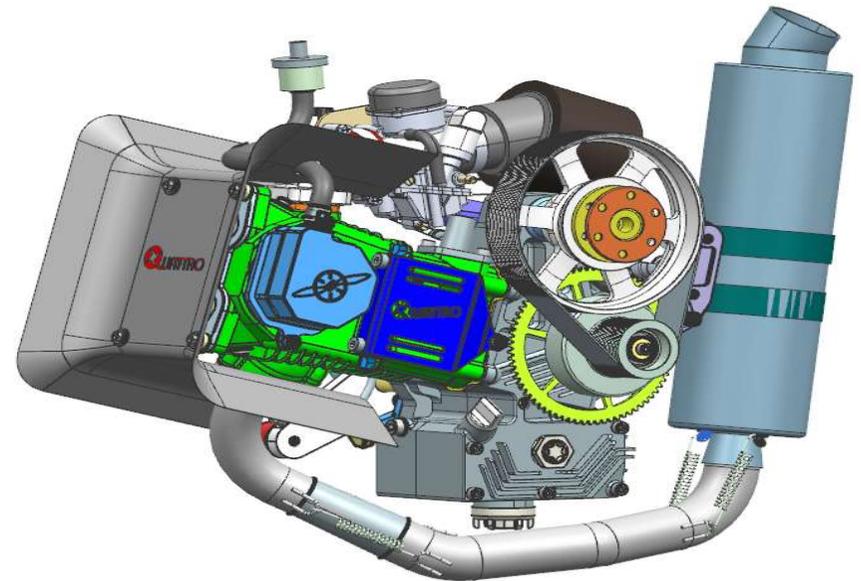



EOS Quattro parts list

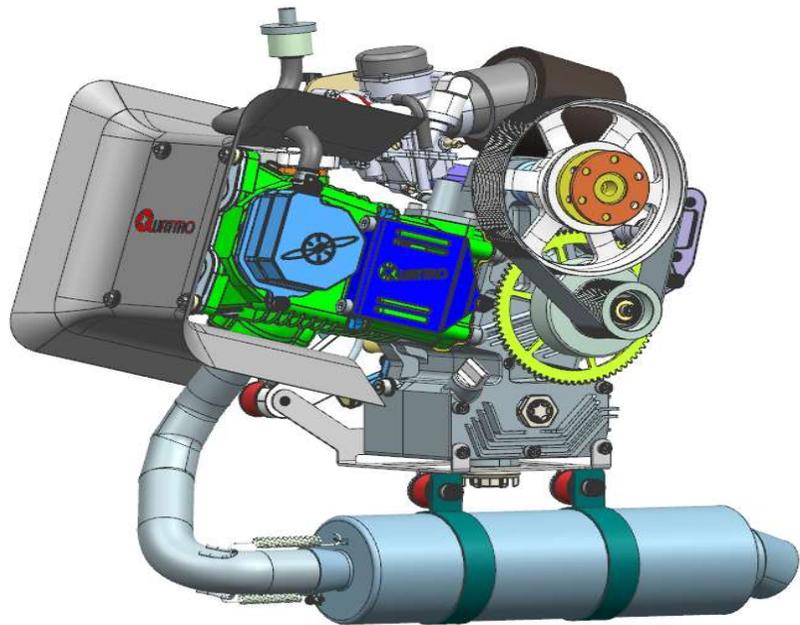


Item	P/N	System name	Qty
0	000Z001	Engine assembly	1
1	100Z001	Engine frame	1
2	200Z001	Engine unit	1
3	300Z001	Ignition system	1
4	400Z001	Starter motor	1
5	500Z001	Fuel system	1
6	600Z001	Rope starter	1
7	700Z001	Belt transmission	1
8	800Z001	Exhaust system (normal/lower)	1
9	900Z001	Vent tube system	1
10	1000Z001	Cooling shroud system	1

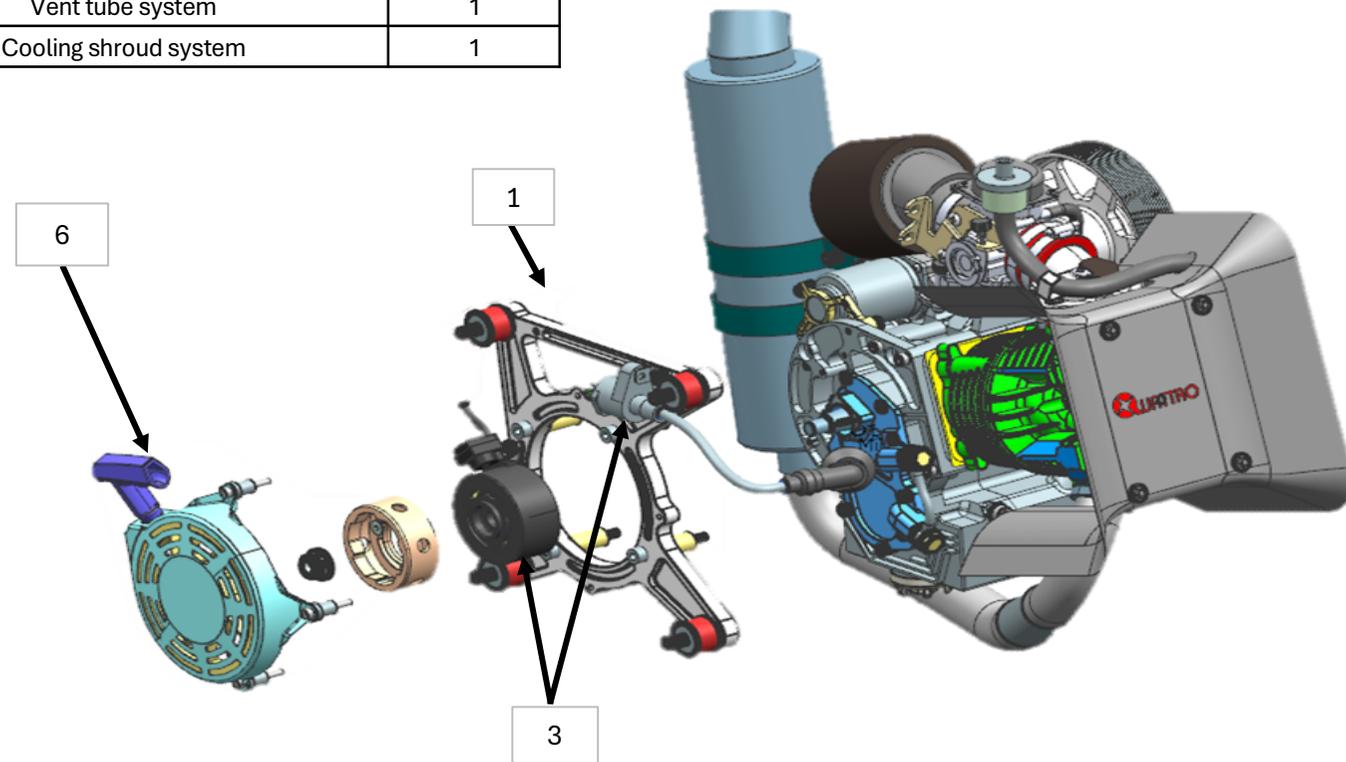


Item	P/N	System name	Qty
0	000Z001	Engine assembly	1
1	100Z001	Engine frame	1
2	200Z001	Engine unit	1
3	300Z001	Ignition system	1
4	400Z001	Starter motor	1
5	500Z001	Fuel system	1
6	600Z001	Rope starter	1
7	700Z001	Belt transmission	1
8	800Z001	Exhaust system (normal/lower)	1
9	900Z001	Vent tube system	1
10	1000Z001	Cooling shroud system	1

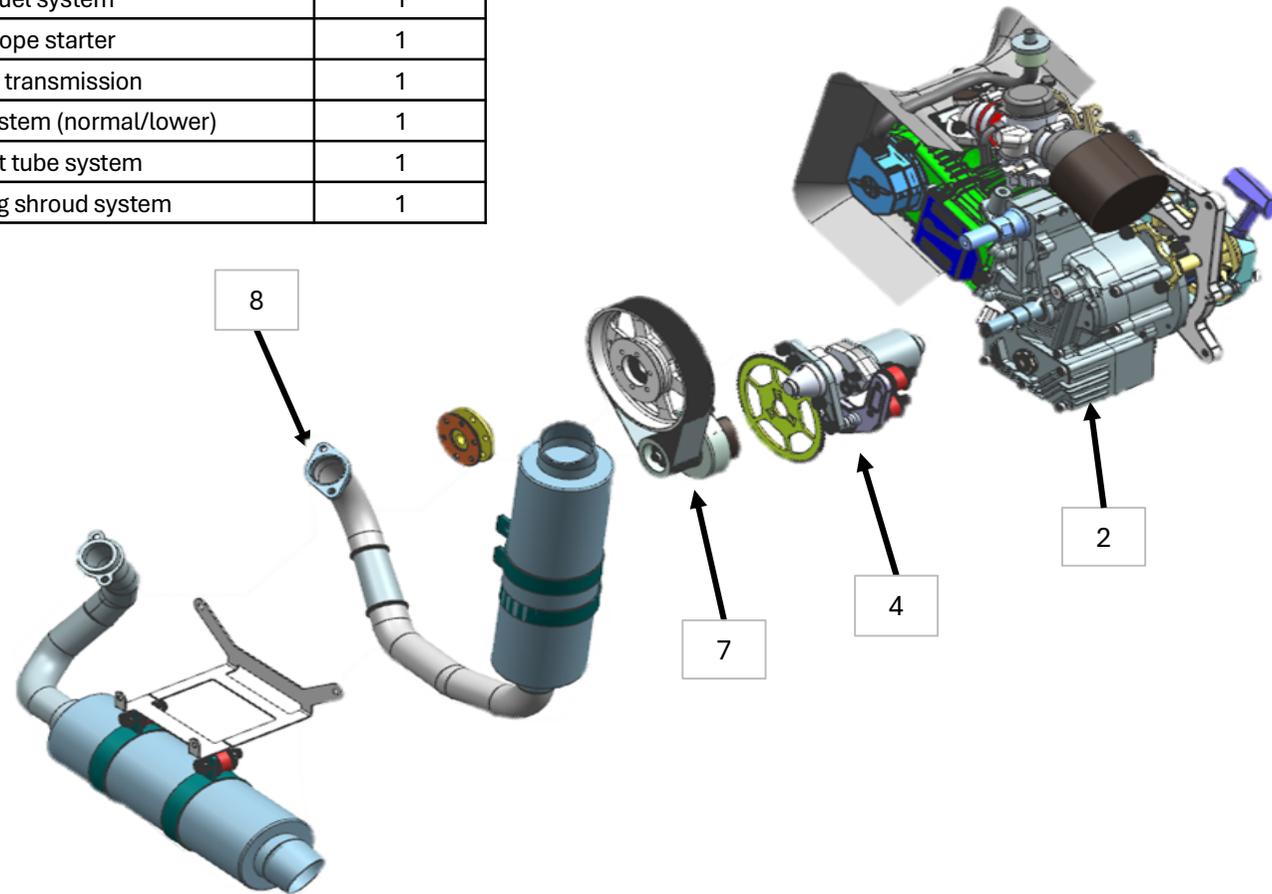



Item	P/N	System name	Qty
0	000Z001	Engine assembly	1
1	100Z001	Engine frame	1
2	200Z001	Engine unit	1
3	300Z001	Ignition system	1
4	400Z001	Starter motor	1
5	500Z001	Fuel system	1
6	600Z001	Rope starter	1
7	700Z001	Belt transmission	1
8	800Z001	Exhaust system (normal/lower)	1
9	900Z001	Vent tube system	1
10	1000Z001	Cooling shroud system	1

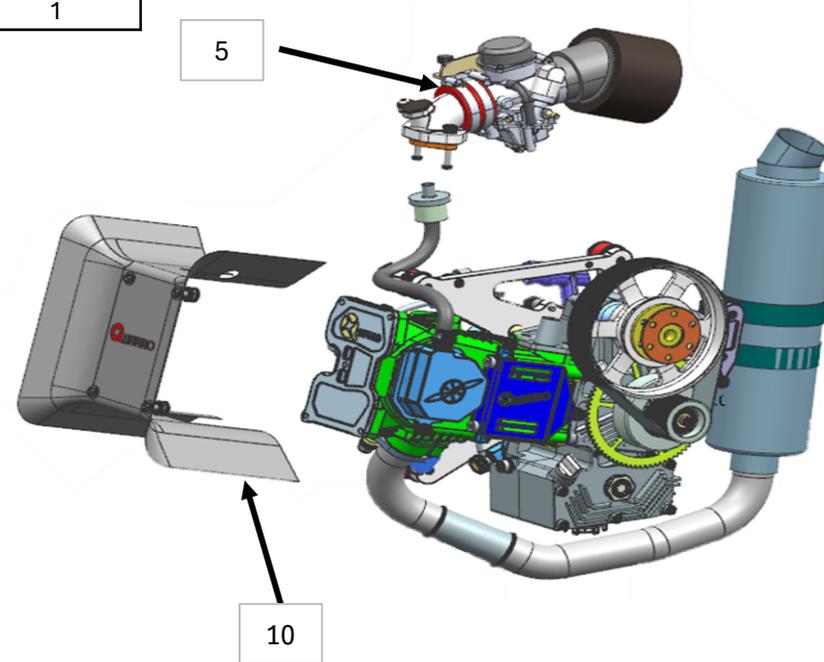


1 Frame sub-assembly

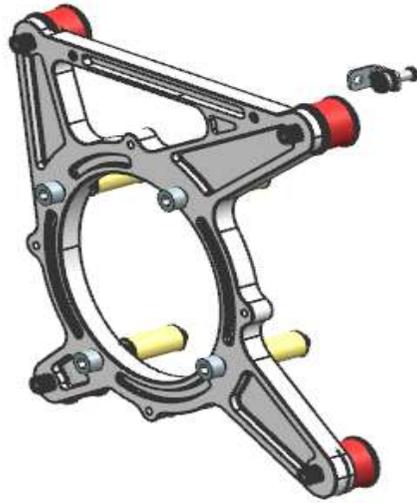


Item	P/N	Part name	Qty
1	100Z001	Frame sub-assembly	1
1-1	100A001	Engine mount bracket	1
1-2	100B001	Collar M8 AL	4
1-3	100C001	Oil cooler (option)	1
1-4	100D001	Oil cooler bracket (option)	1
1-5	100E001	Screw (CBM8-55 M8)	4
1-6	100F001	Hose bolt (M10*1.25)	2
1-7	100G001	Screw (CBM6-20)	2
1-8	100H001	Hose bolt (M12*1.25)	2
1-9	100I001	Oil in hose	1
1-10	100J001	Oil out hose	1
1-11	100K001	Oil cooler bush	2
1-12	100L001	Engine frame bush	4
1-13	100M001	Oil cooler bolt	2
1-14	100N001	Ignition coil panel	1
1-15	100O001	Oil bypass	1

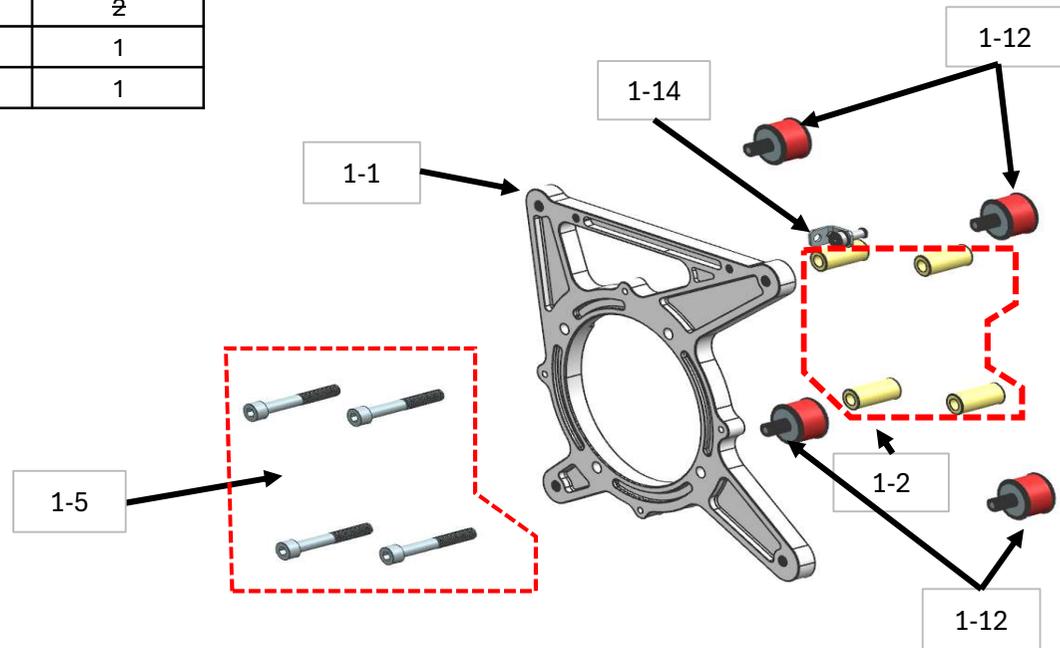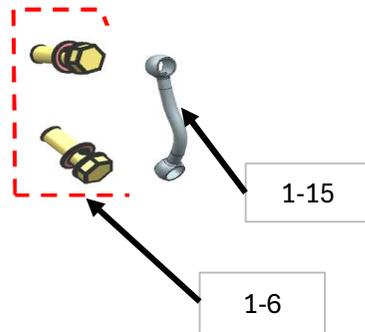


2 Engine unit

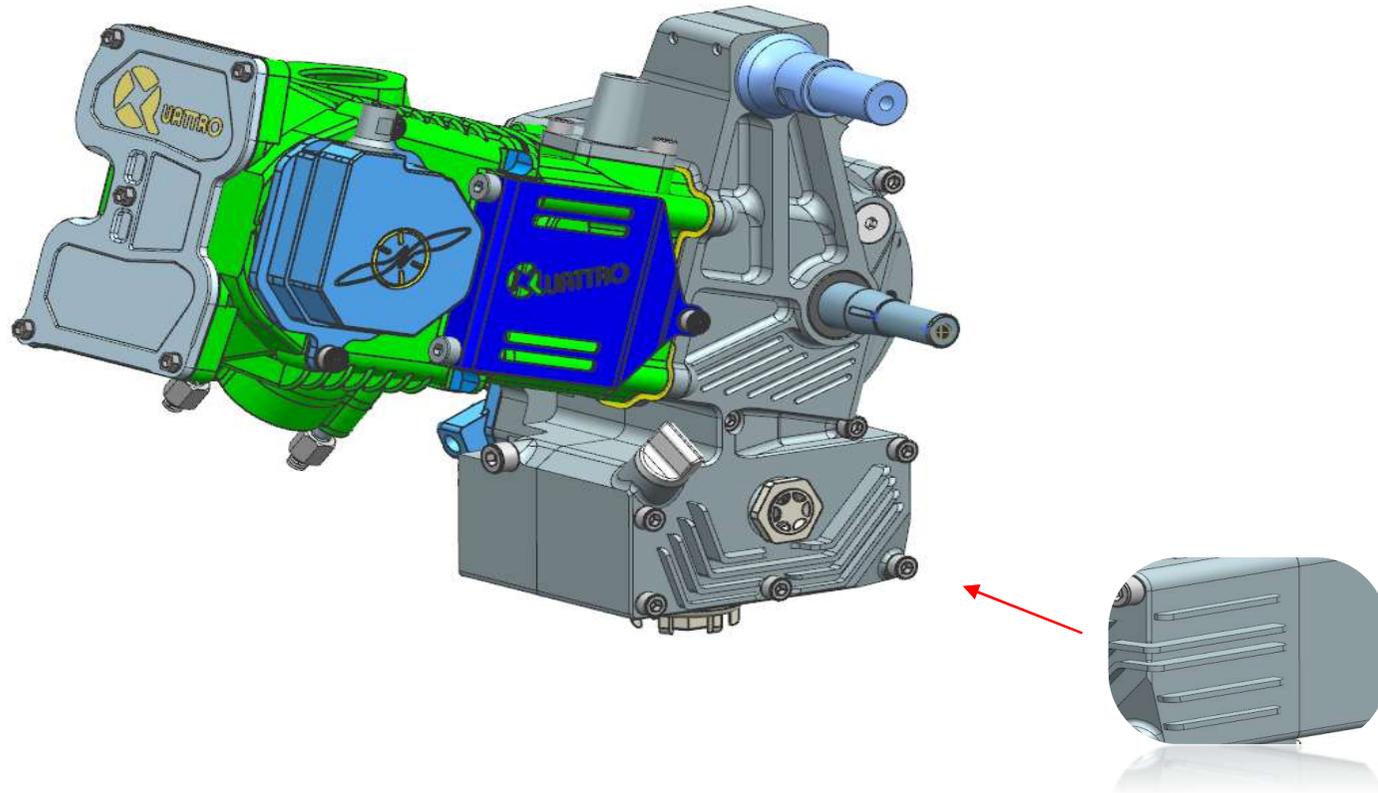


Item	P/N	Part name	Qty
2	200Z001	Engine unit	1
2-1	200A001	Crankcase block	see detail
2-2	200B001	Cylinder	see detail
2-3	200C001	Cylinder head	see detail
2-4	200D001	Head cover	1
2-4-1	200DA01	Head cover seal	1
2-5	200E001	Head cover screws	5
2-6	200F001	Cylinder cover	1
2-7	200G001	Vent cover assembly	see detail
2-9	200I001	Screw (SCB5-8)	1
2-10	200J001	Screw (CSHHB-ST-M6-105)	2
2-11	200K001	Screw (CBM6-15)	2

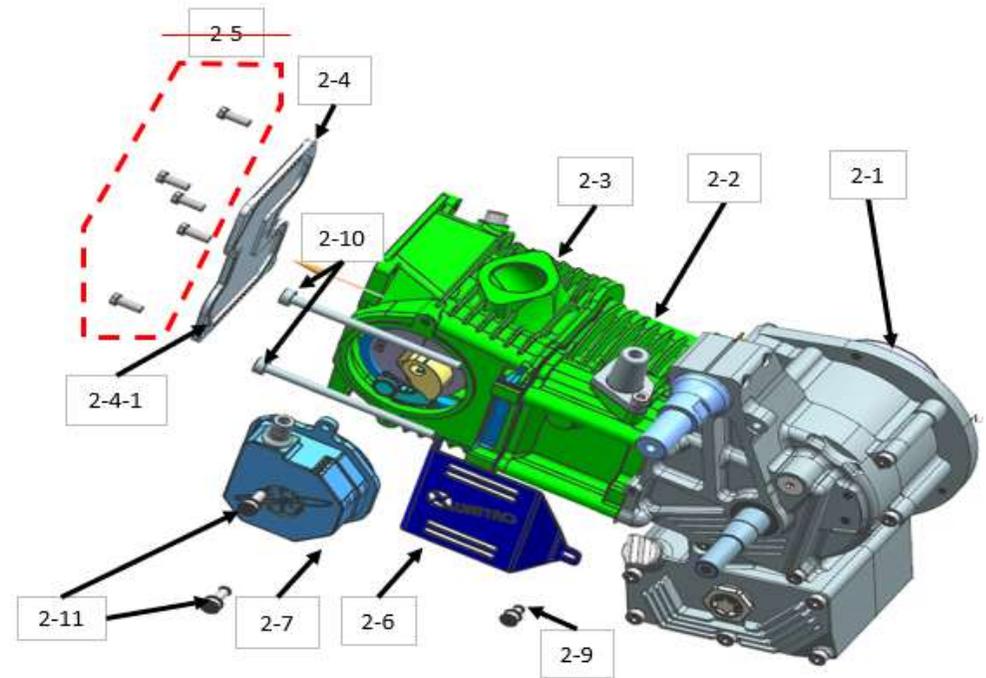


Item	P/N	Part name	Qty
2-7	200G001	Vent cover assembly	1
2-7-1	200GA01	O-ring (93210-71803)	1
2-7-2	200GB01	Bolt washer (97517-06512)	1
2-7-3	200GC01	Plate breather (5ML-E1165-00)	1
2-7-4	200GD01	Seal (4CW-E1155-00)	1
2-7-5	200GE01	Vent cover	1
2-7-6	200GF01	Vent cover tube	1

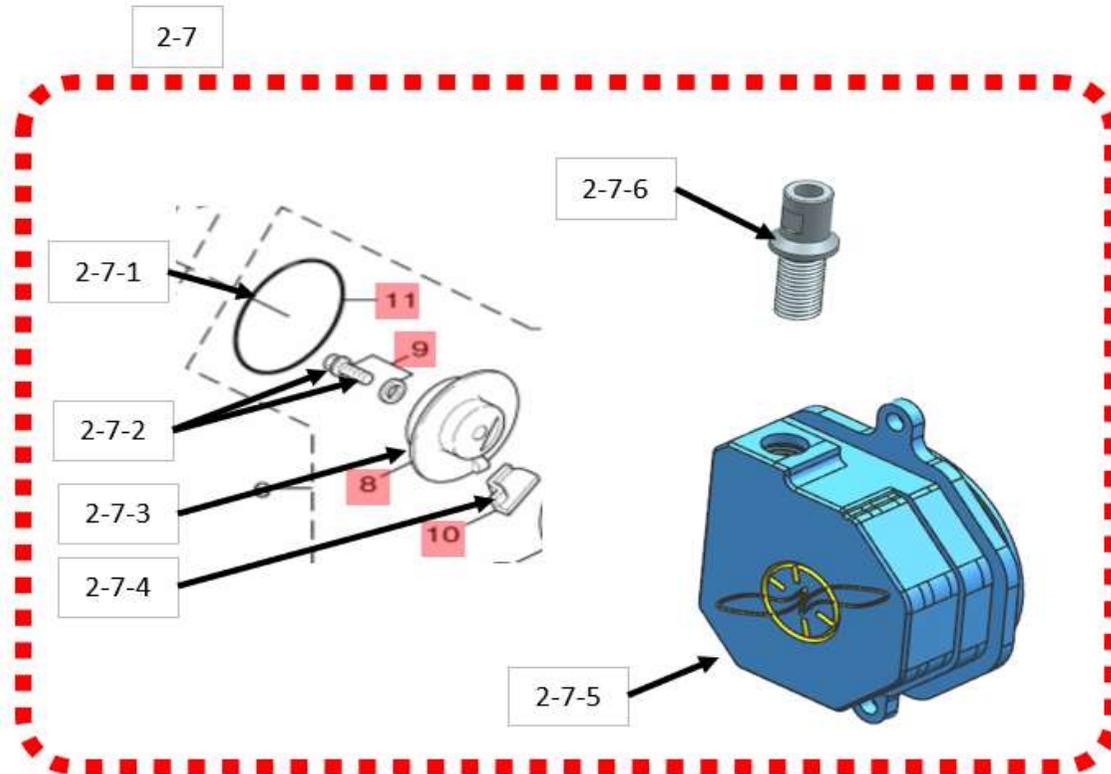


2-1 Crankcase block

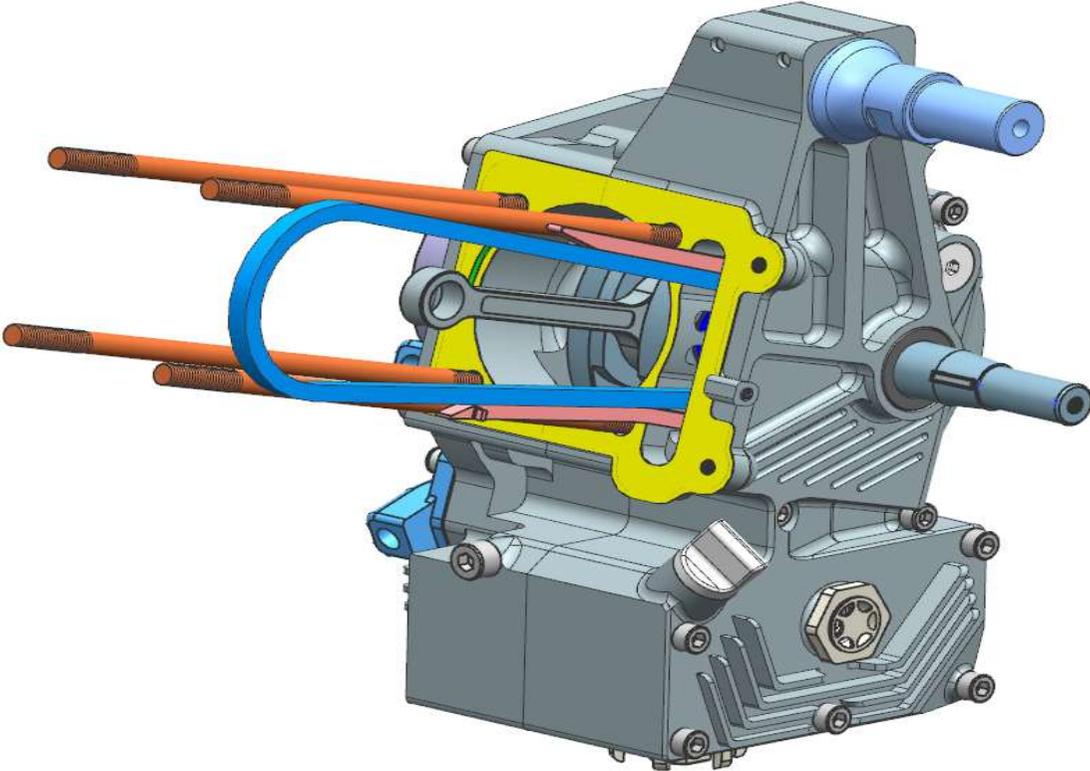


Item	P/N	Part name	Qty
2-1	200A001	Crankcase block	1
2-1-1	200AA01	Crankshaft assembly	1
2-1-1-1	200AA02	RH rotor key (90701-HFB6-011)	1
2-1-1-2	200AA03	LH clutch key (90280-03017)	1

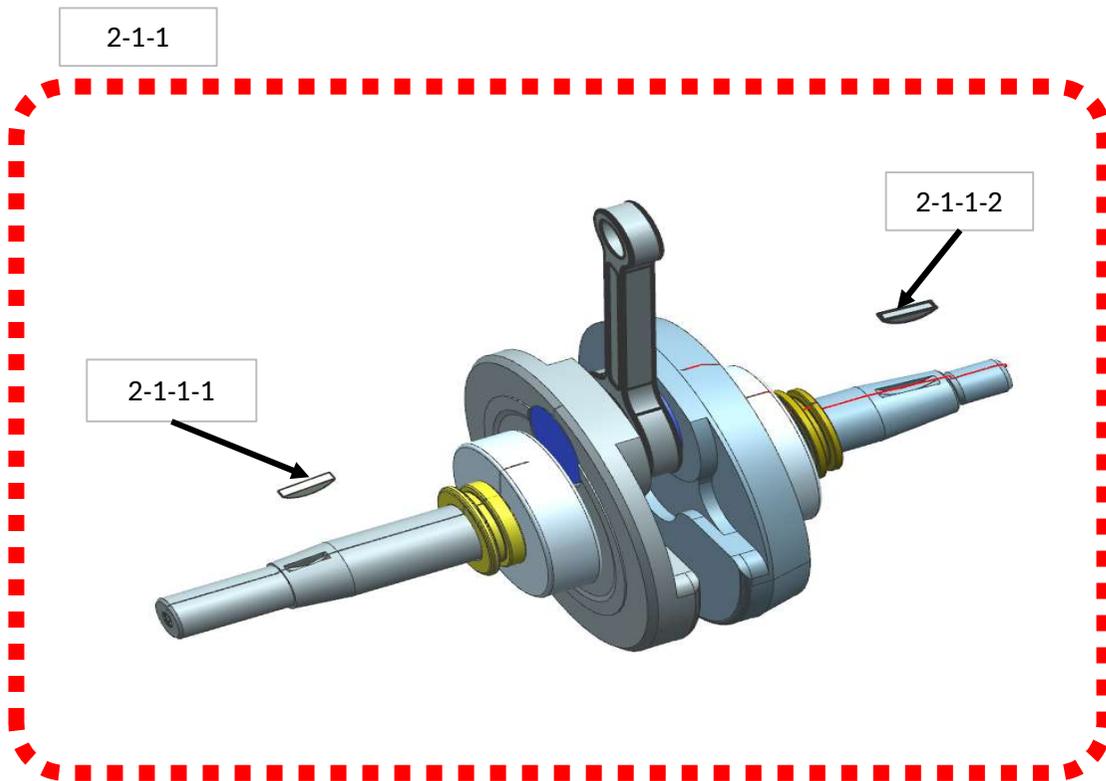


Item	P/N	Part name	Qty
2-1-4	200AD01	Screw (CSH-SUS-M6-75)	7
2-1-7	200AG01	Screw (CBM6-35)	2 </td
2-1-8	200AH01	Screw (CSH-STN-M6-65)	2

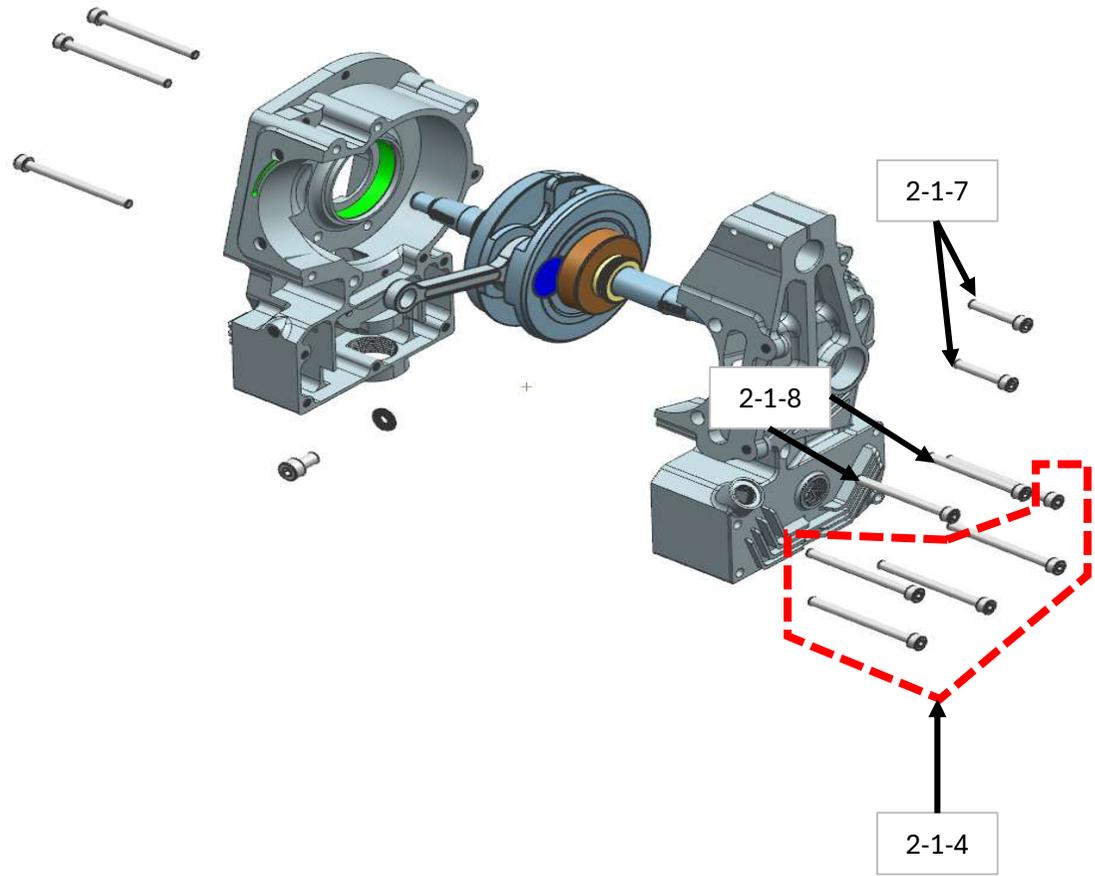


Item	P/N	Part name	Qty
2-1-11	200AK01	Propeller shaft	1
2-1-12	200AL01	Cam chain (98 links)	1
2-1-13	200AM01	Oil cap (4Y4-E5363-00)	1
2-1-14	200AN01	Oil window	1
2-1-15	200AG01	Screw (CBM6-35)	2
2-1-32	200AAF1	Upper tensioner (5ML-E2241-00)	1
2-1-33	200AAG1	Lower tensioner (5ML-E2231-00)	1
2-1-34	200AAH1	Tensioner bolt (3B3-E2157-00)	1
2-1-35	200AAI1	Tensioner bolt o-ring (93210-15862)	1
2-1-37	200AAK1	Front crankshaft seal (30/19.8/5)	1
2-1-46	200AM02	Oil cap seal (93210-14805)	1

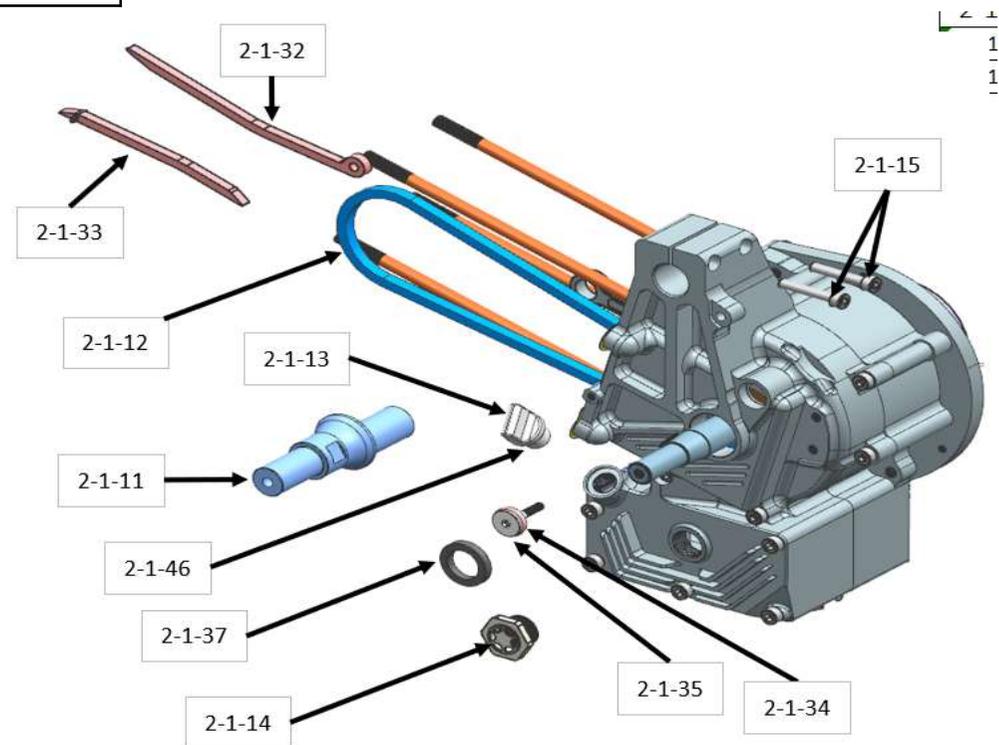


Item	P/N	Part name	Qty
2-1-16	200AP01	Crankcase cover	1
2-1-17	200AQ01	Screws (C-CBSTS5-14)	4
2-1-46	200AQ02	Screws (TRX CAP / M5X15 P0.8)	3
2-1-18	200AR01	Screw (CSHHA-STU-M5-15)	5
2-1-39	200AAM1	Nut (FNT-STU-MS12)	1

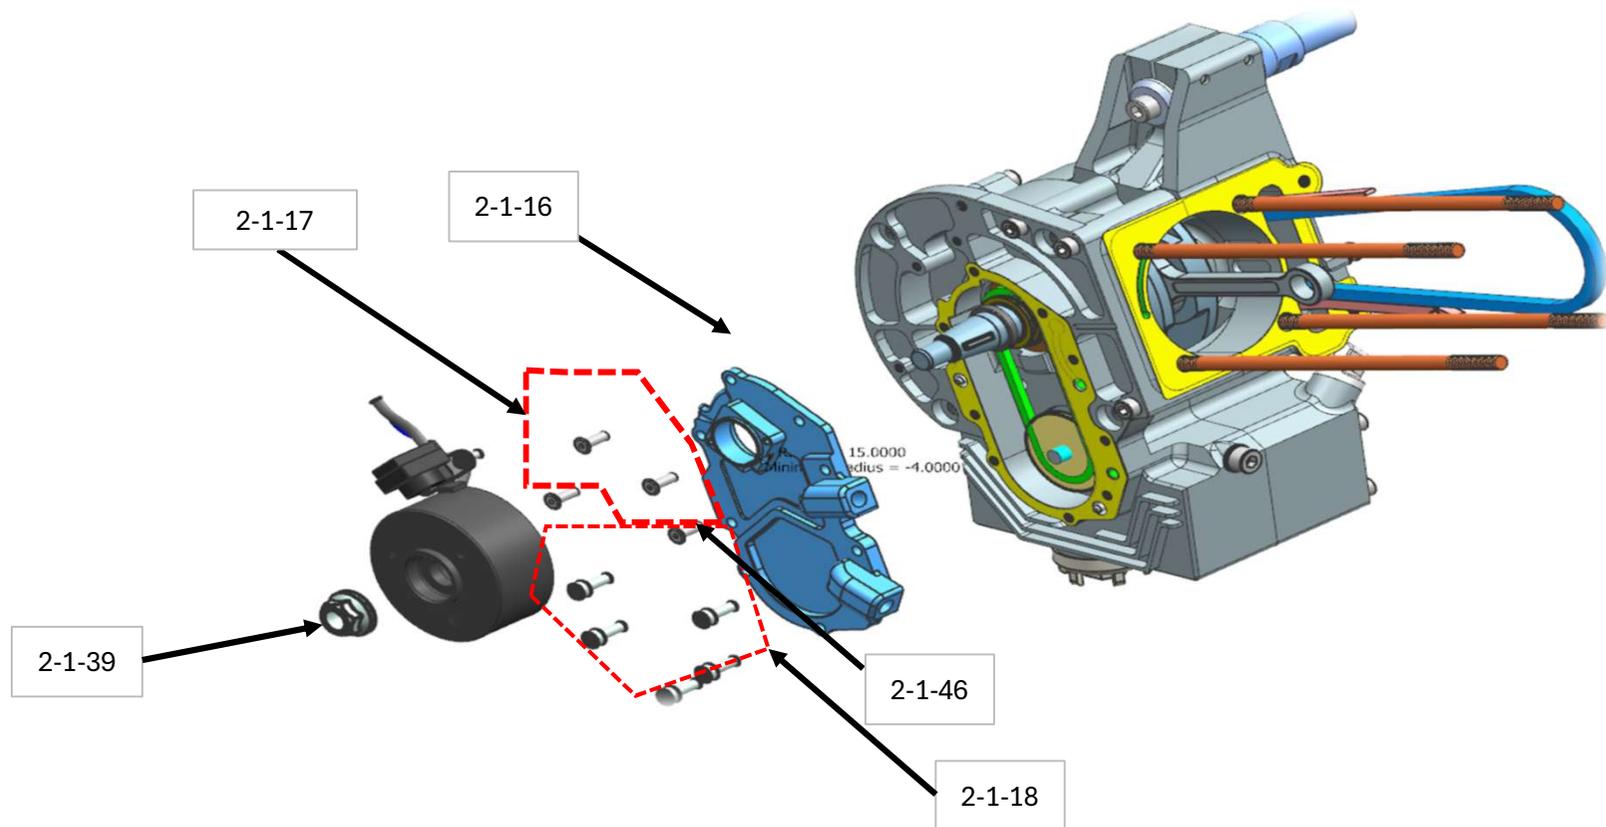


Item	P/N	Part name	Qty
2-1-28	200AAB1	Tensioner (5ML-E5351-20)	1
2-1-40	200K001	Screw (CBM6-15)	2
2-1-41	200AAO1	Tensioner gasket	1

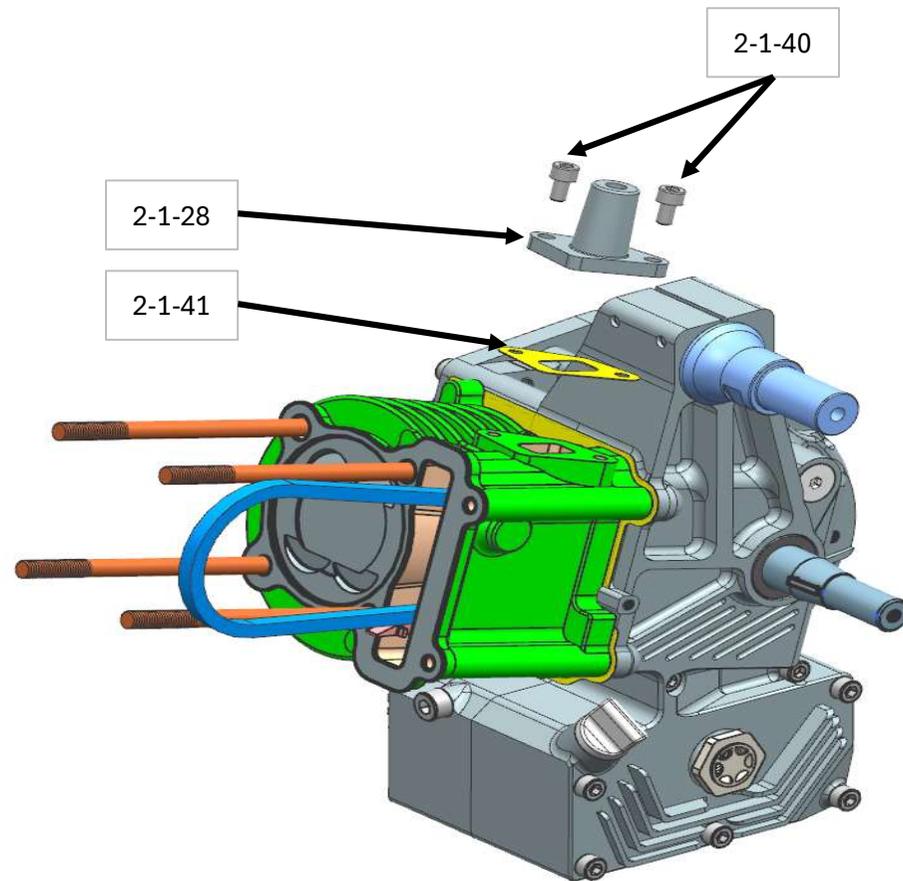


Item	P/N	Part name	Qty
2-1-2	200AB01	Crankcase front	1
2-1-3	200AC01	Crankcase rear	1
2-1-4	200AD01	Screw (CSH-SUS-M6-75)	7
2-1-5	200AE01	Screw (SCB6-70)	1
2-1-6	200AF01	Screw (CBM8-15)	1
2-1-45	200AAS1	Washer (M8 AL)	1

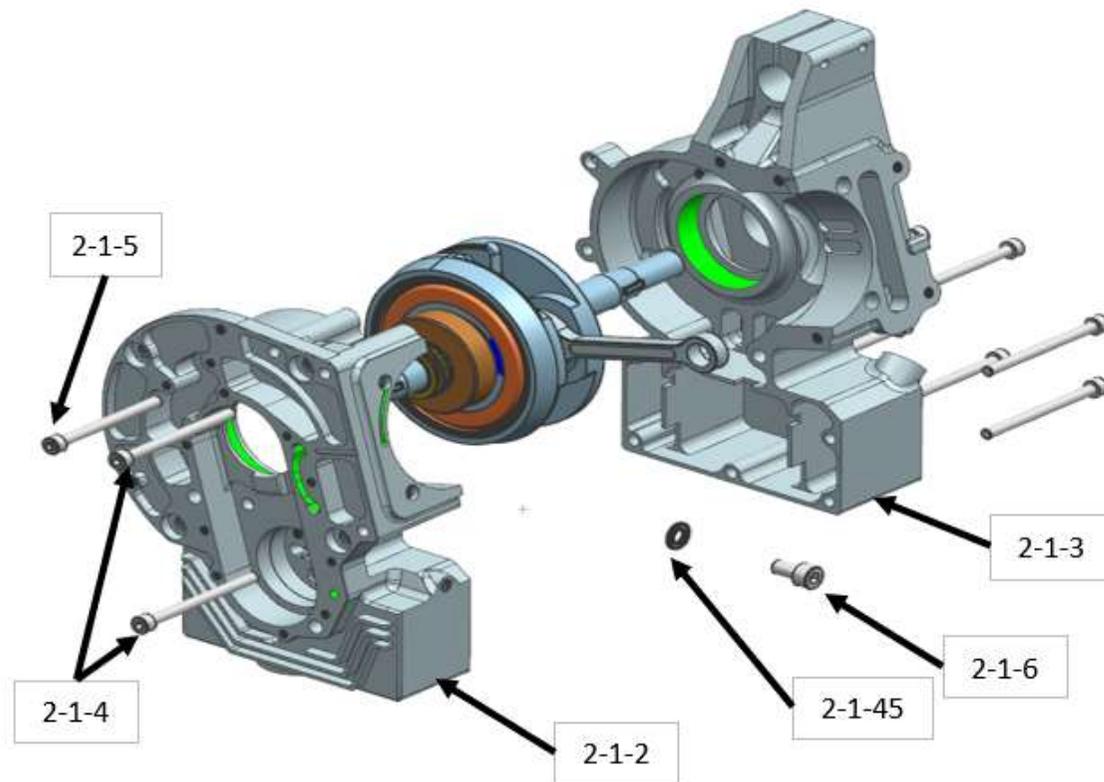


Item	P/N	Part name	Qty
2-1-9	200AI01	Oil pump chain (15141-GFY6-90C)	2
2-1-19	200AS01	Location pin 8mm (8x14)	4
2-1-23	200AW01	Oil pump (15100-GFY6-901)	1
2-1-24	200AX01	Crankcase cover gasket	1
2-1-25	200AY01	Propeller shaft spacer	1
2-1-31	200AAE1	Stud bolt LH	2
2-1-48	200AAE2	Stud bolt RH	2
2-1-36	200AAJ1	Crankshaft seal (30/19.8/5)	1
2-1-38	200AAL1	Screw (CBM8-15)	1
2-1-44	100G001	Screw (CBM6-25)	2

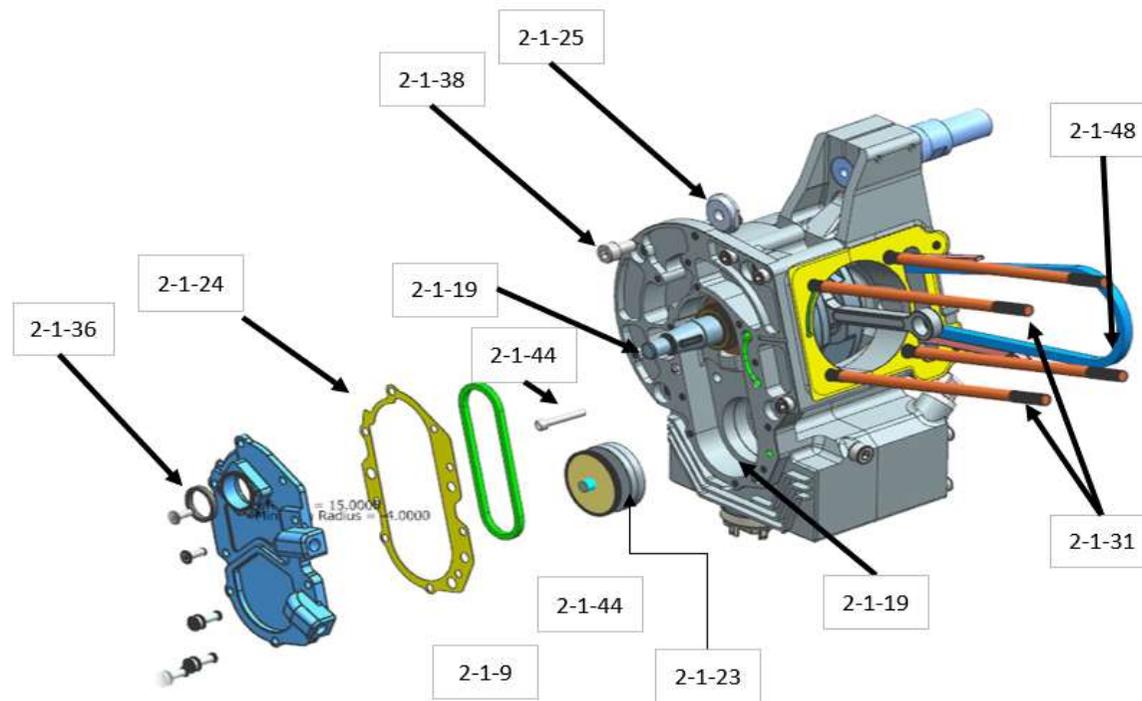


Item	P/N	Part name	Qty
2-1-10	200AJ01	Oil cap seal ring (93210-29800)	1
2-1-26	200AZ01	Oil net (5ML-E3411-00)	1
2-1-27	200AAA1	Oil drawn cap (5ML-E5351-20)	1
2-1-42	200AAP1	Oil pipe (5ML-E3416-00)	1
2-1-47	200AZ02	Oil net spring (90501-16004)	1

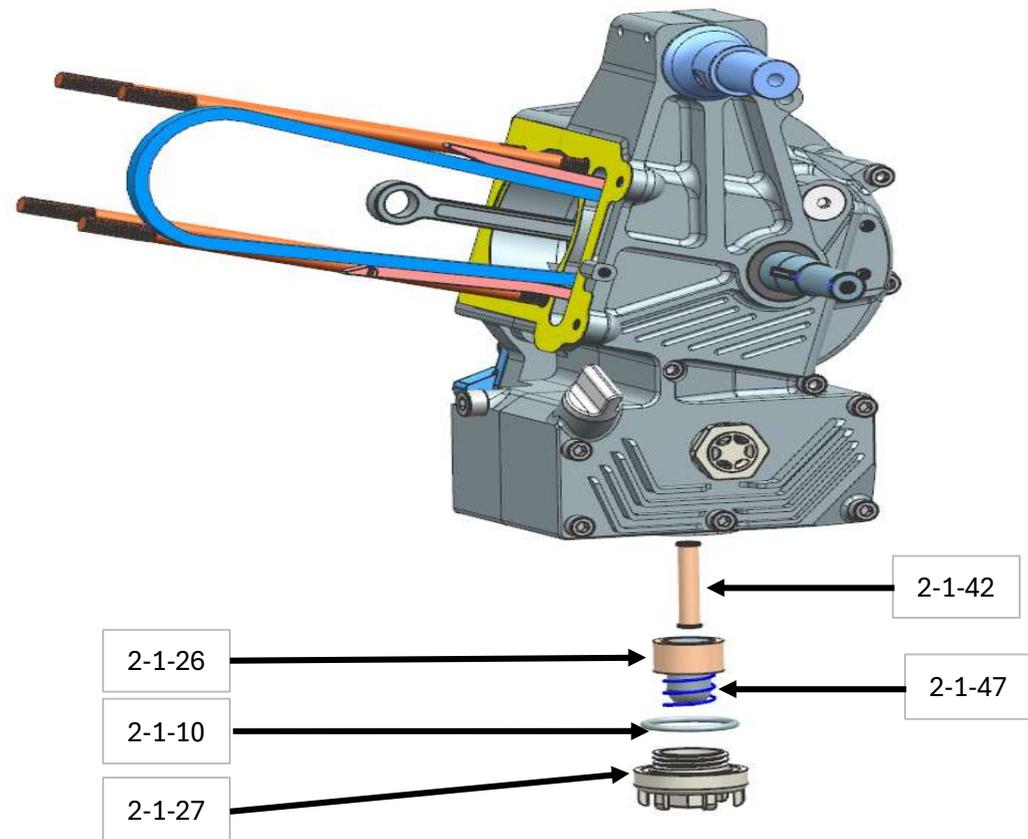


Item	P/N	Part name	Qty
2-1-29	200AAC1	Head gasket	1
2-1-30	200AAD1	Base gasket	1

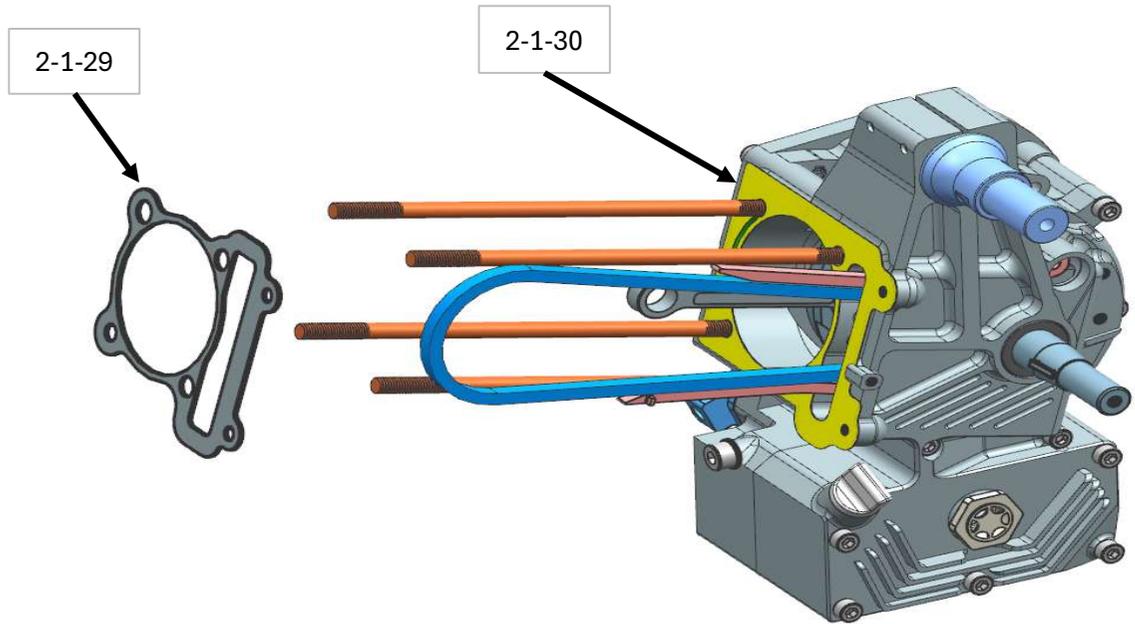


2-2 Cylinder sub-assembly

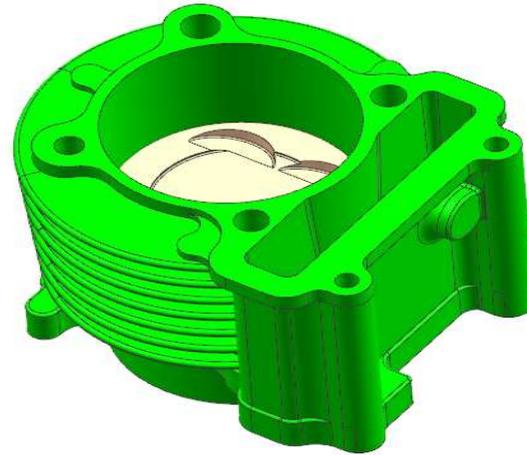


Item	P/N	Part name	Qty
2-2	200B001	Cylinder unit	1
2-2-1	200BA01	Piston	1
2-2-2	200BB01	Cylinder unit	1
2-2-3	200BC01	Piston pin	1
2-2-4	200BD01	Stud locator (10x14mm)	2
2-2-5	200BF01	Piston ring set	1
2-2-6	200BG01	Piston pin clip set	2

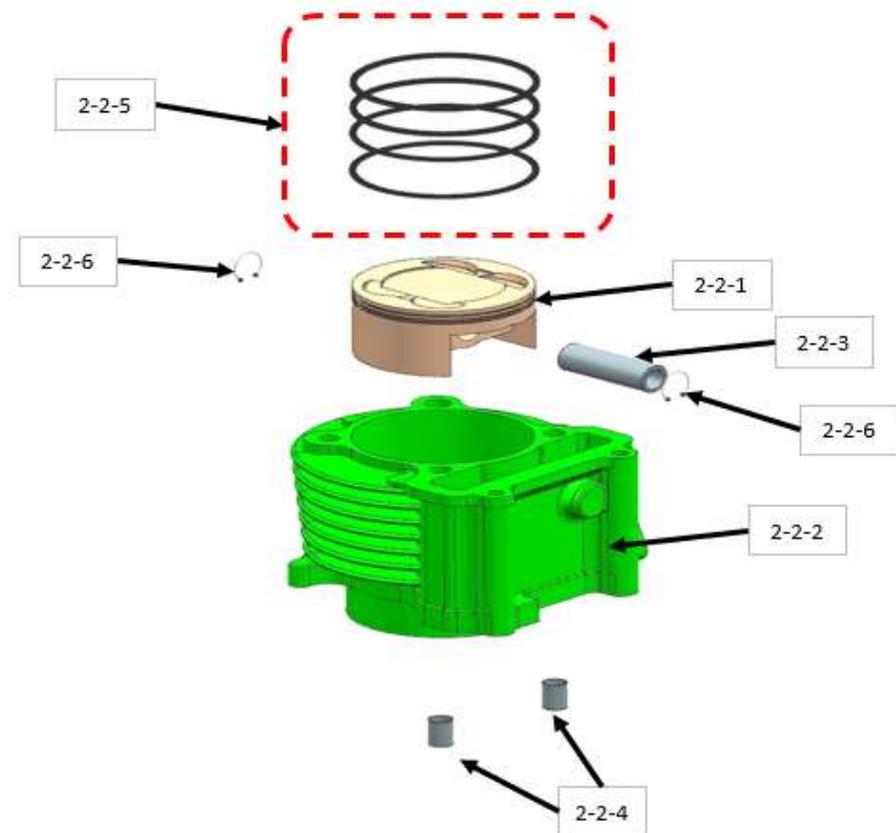


2-3 Cylinder head sub-assembly

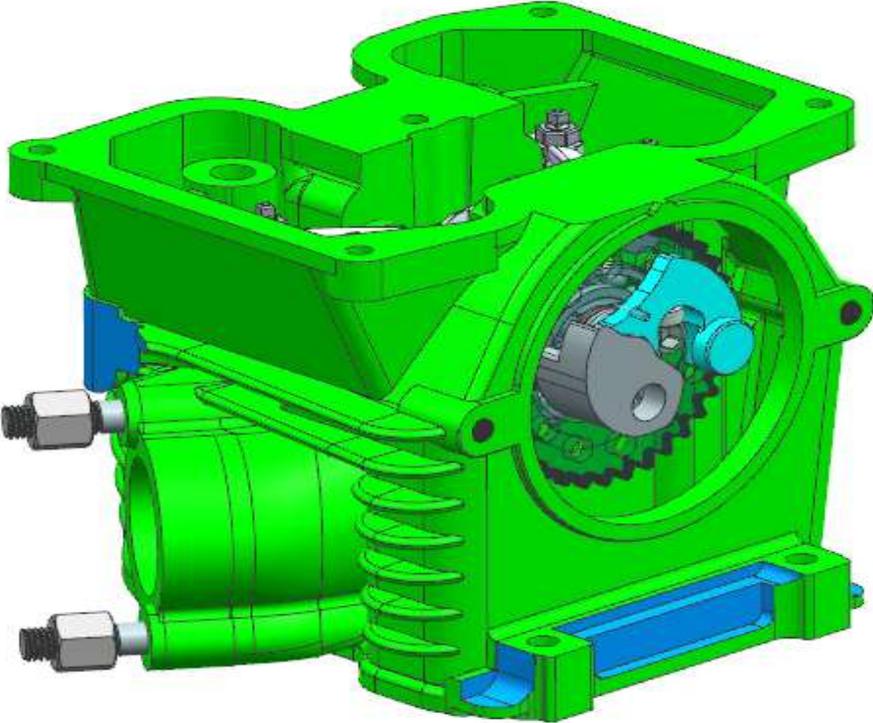


Item	P/N	Part name	Qty
2-3	200C001	Cylinder head sub-assembly	1
2-3-1-1	200CA01-1	Camshaft	1
2-3-6	200CF01	Ball bearing 61904	1
2-3-7	200CG01	Ball bearing 6001	1
2-3-9	200CI01	Head exhaust stud bolt	2
2-3-10	200CK01	EX pipe gasket	1
2-3-11	200CL01	IN rocker arm	1
2-3-12	200CM01	EX rocker arm	1
2-3-21	200CU01	Rocker arm pin (5HK-E2156-00)	2
2-3-22	200CV01	Rocker arm plate (5ML-E111F-00)	1
2-3-23	200AAN2	Screw (M6x8)	1
2-3-30	200CV02	Rocker arm cover	2
2-3-31	200CV03	Rocker arm cover seal	2
2-3-32	200CV04	Rocker arm cover screw	4
2-3-25	200CTX02	Head nut (FRNUT8)	4
2-3-26	200CTX03	Head washer (PWF8)	4
2-3-33	200CTX05	Nut copper M8 (WKMM8)	2
2-3-34	200CTX06	Exhaust washer	4
2-3-35	200CTX07	Exhaust spring	2

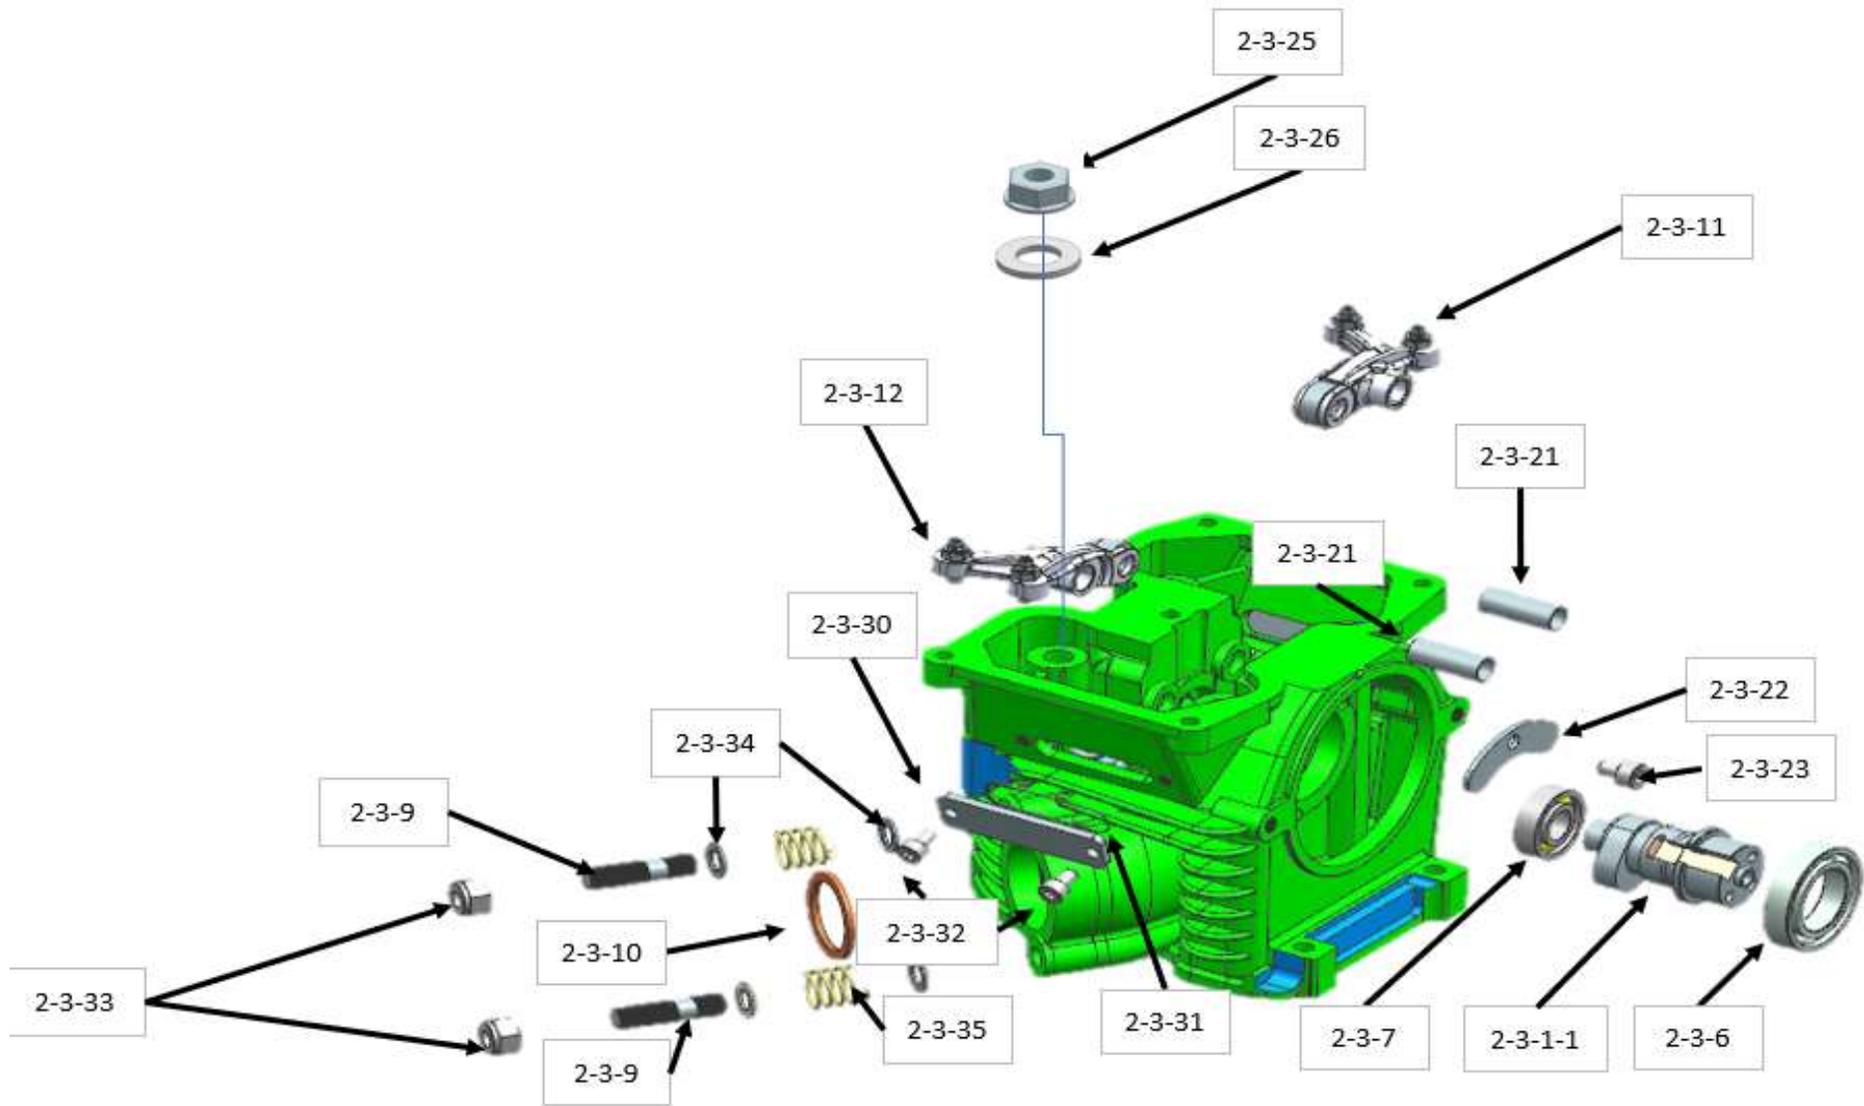


Item	P/N	Part name	Qty
2-3-8	200CH01	Stud locator M12	2
2-3-13	200CN01	EX valve	2
2-3-14	200CO01	Valve spring	4
2-3-15	200CP01	Valve seal	4
2-3-16	200CQ01	Valve retainer	4
2-3-17	200CR01	Valve clip	8
2-3-18	200CS01	IN valve	2
2-3-20-1	200CT01-1	Machined cylinder head unit	1

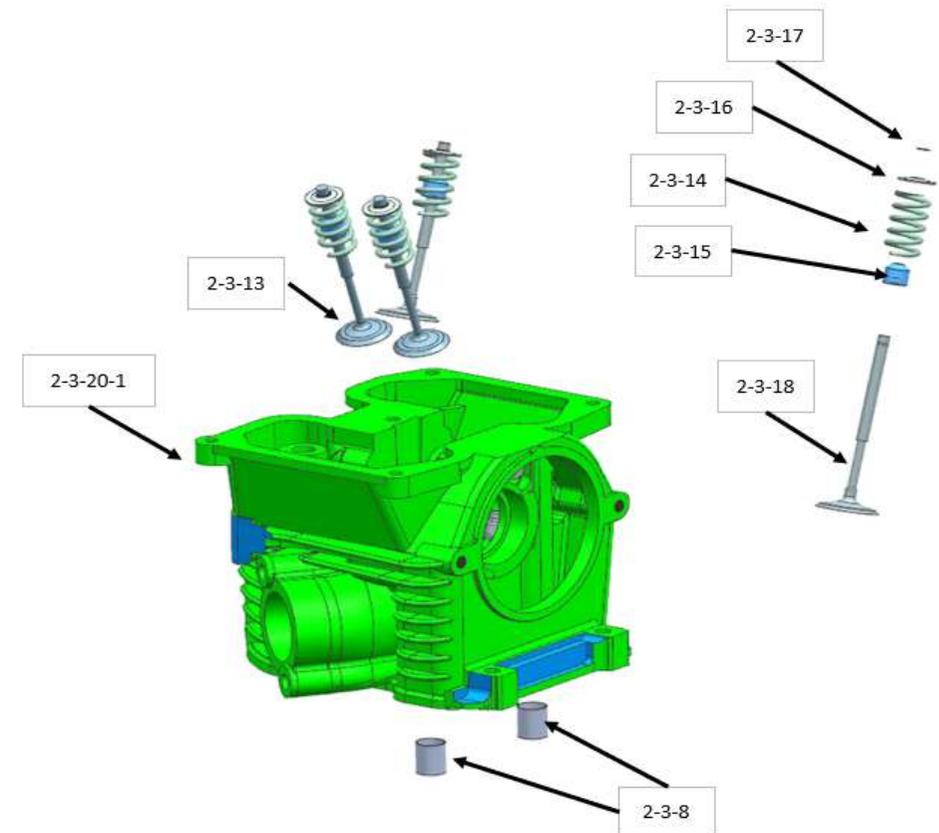






Item	P/N	Part name	Qty
2-3-3-1	200CC01-1	Machined camshaft sprocket	1
2-3-2-2	200CB01S	Decompression shaft	1
2-3-4	200CD01	Decompression cover	1
2-3-24	200CX01	Torsion spring	1
2-3-27	200CTX04	Screw (CBE5-15)	2
2-3-29	200CX02	Washer decomp shaft (12955-33G00-000)	1

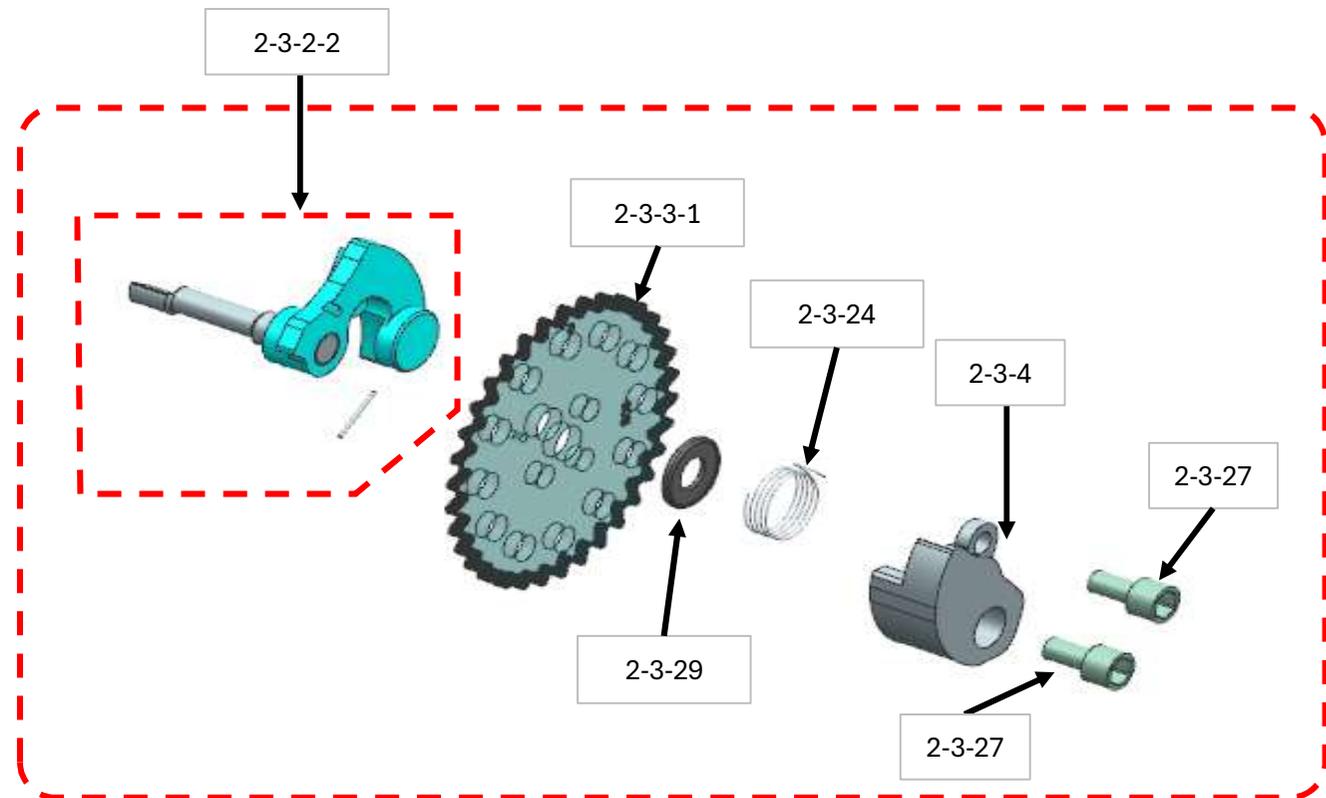


3 Ignition System

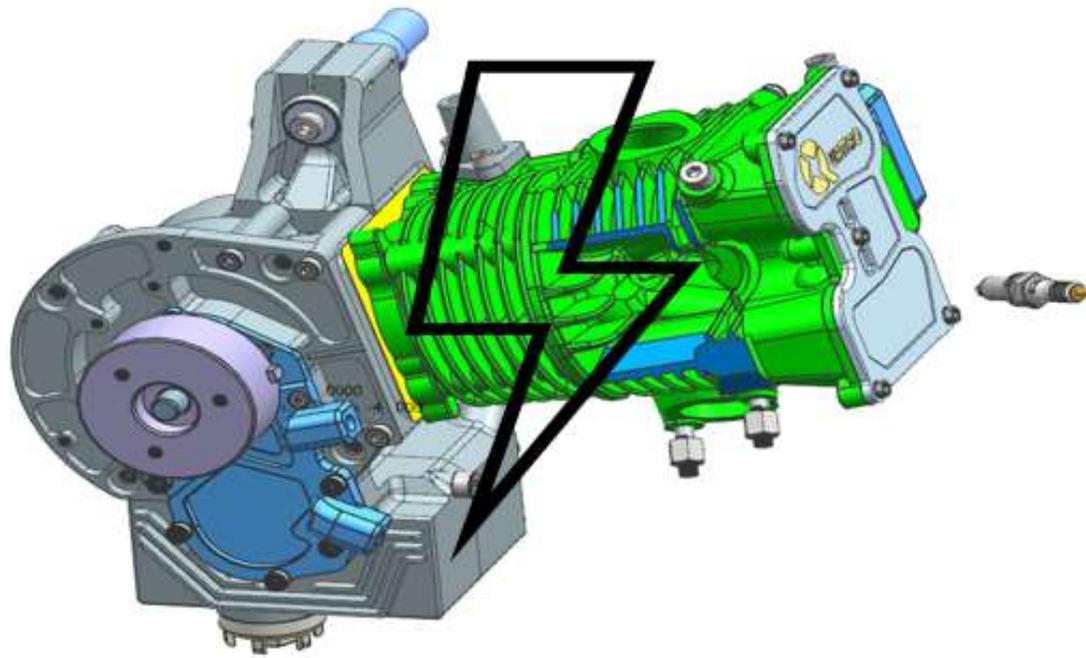


Item	P/N	Part name	Qty
3	300Z001	Ignition system	1
3-1	300A001	CDI	1
3-2	300B001	Wire harness	1
3-3	300C001	Ignition coil	1
3-4	300D001	A.C.G. kit	1
3-4-1	300D002	A.C.G. coil	1
3-4-2	300D003	A.C.G. rotor/flywheel	1
3-5	300E001	Regulator	1
2-8	200H001	Spark plug (NGK CR8E)	1
3-6	300F001	Cooling fan	1

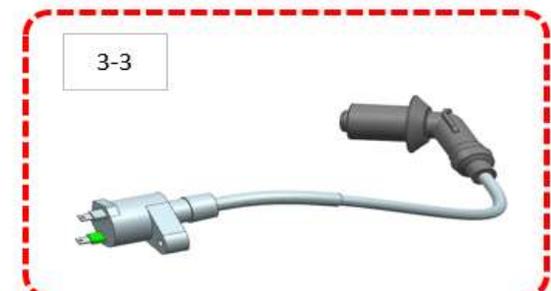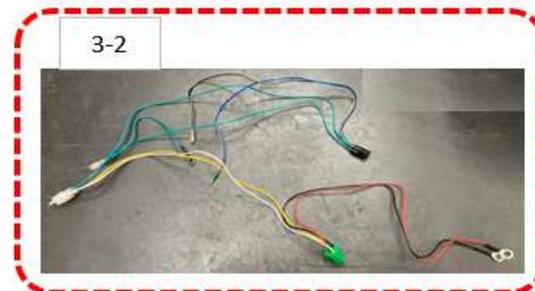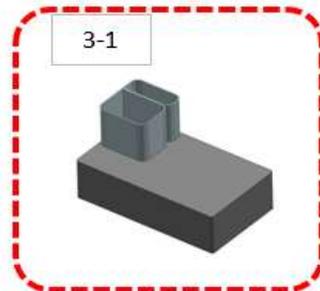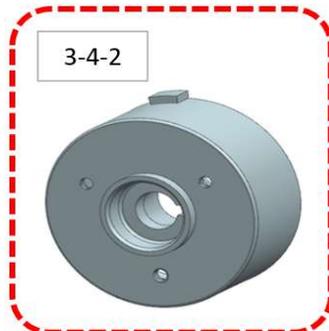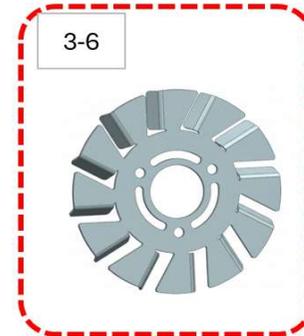



4 Starter motor sub-assembly

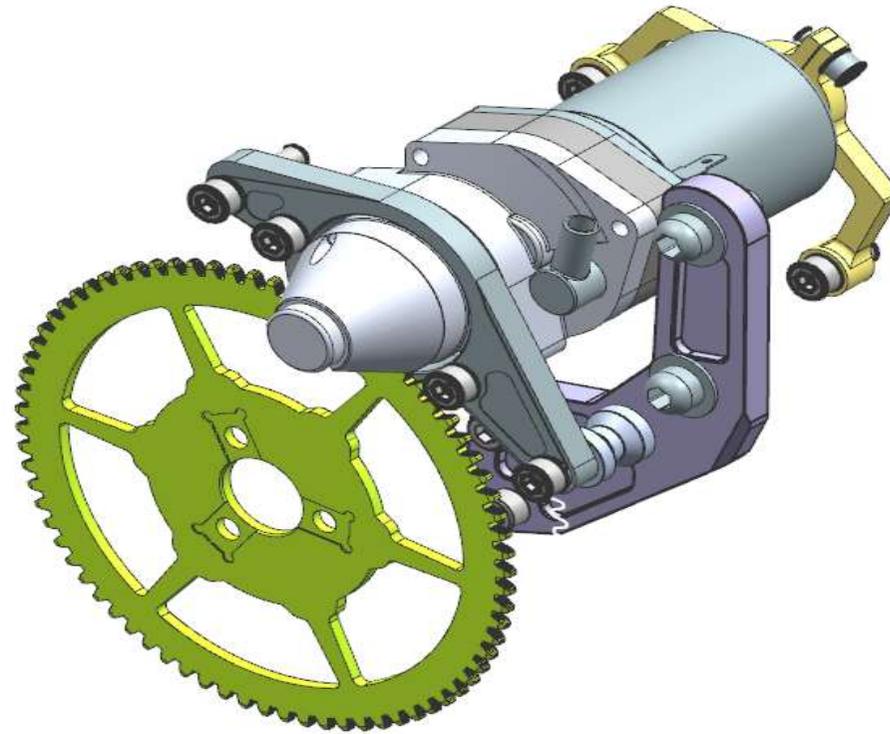


Item	P/N	Part name	Qty
4	400Z001	Starter motor sub-assembly	1
4-1	400A001	75T Starter gear	1
4-2	400B001	Starter support	1
4-3	400C001	Starter motor	1
4-4	200K001	Screw (CBE6-15)	2
4-5	400E001	Screw (CBM6-30)	2
4-6	400F001	Screw (CBM6-40)	1
4-7	400G001	Starter support collar	1
4-8	400H001	Exhaust pipe bracket	1
4-9	400I001	Motor holder	1
4-10	400J001	Silencer screw washer set	2
4-11	400K001	Motor holder screw (M4x12)	1
4-12	200AAR1	Screw (CBM6-25)	1
4-13	200AAR2	Screw (M6x15)	2

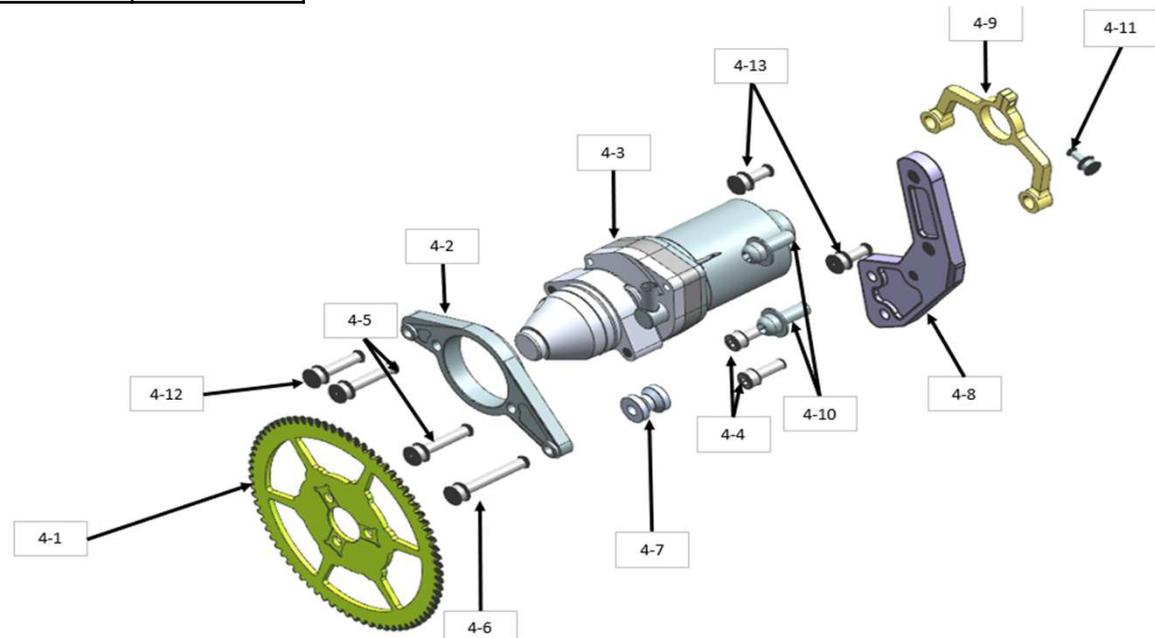

5 Fuel system

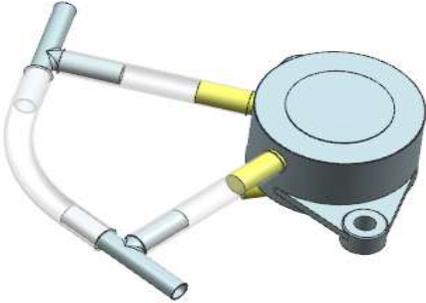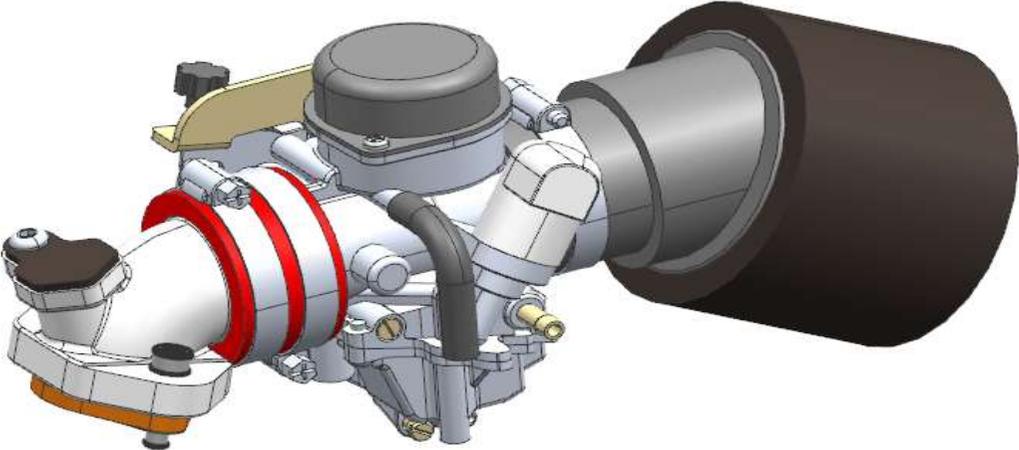

Item	P/N	Part name	Qty
5	500Z001	Fuel system	1
5-1	500A001	Carburator (CVK30)	1
5-2	500B001	Manifold sub-assembly	see detail
5-3	500C001	Air filter	1

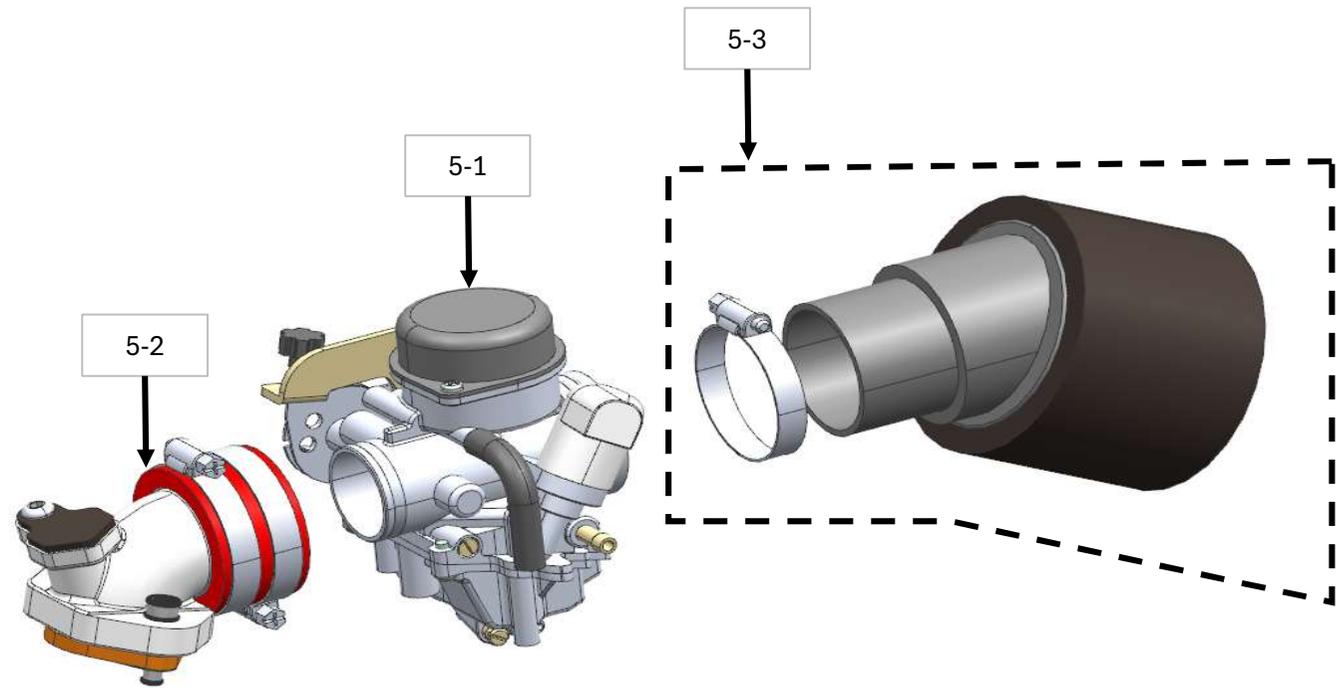


Item	P/N	Part name	Qty
5-4	500D001	Fuel pump	1
5-5	500E001	Fuel pump connection	1


5-5




5-4

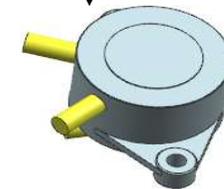


5-2 Manifold sub-assembly

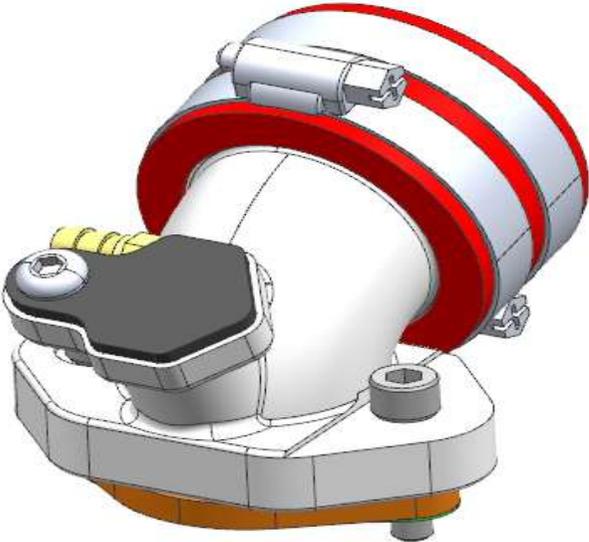


Item	P/N	Part name	Qty
5-2	500B001	Manifold sub-assembly	1
5-2-1	500BA01	Metal clip	2
5-2-2	500BA02	Rubber joint	1
5-2-3	500BA03	Manifold unit	1
5-2-4	500BA04	Manifold gasket	2
5-2-5	500BA05	Manifold baclite	1
5-2-6	400E001	Screw (CBM6-30)	2

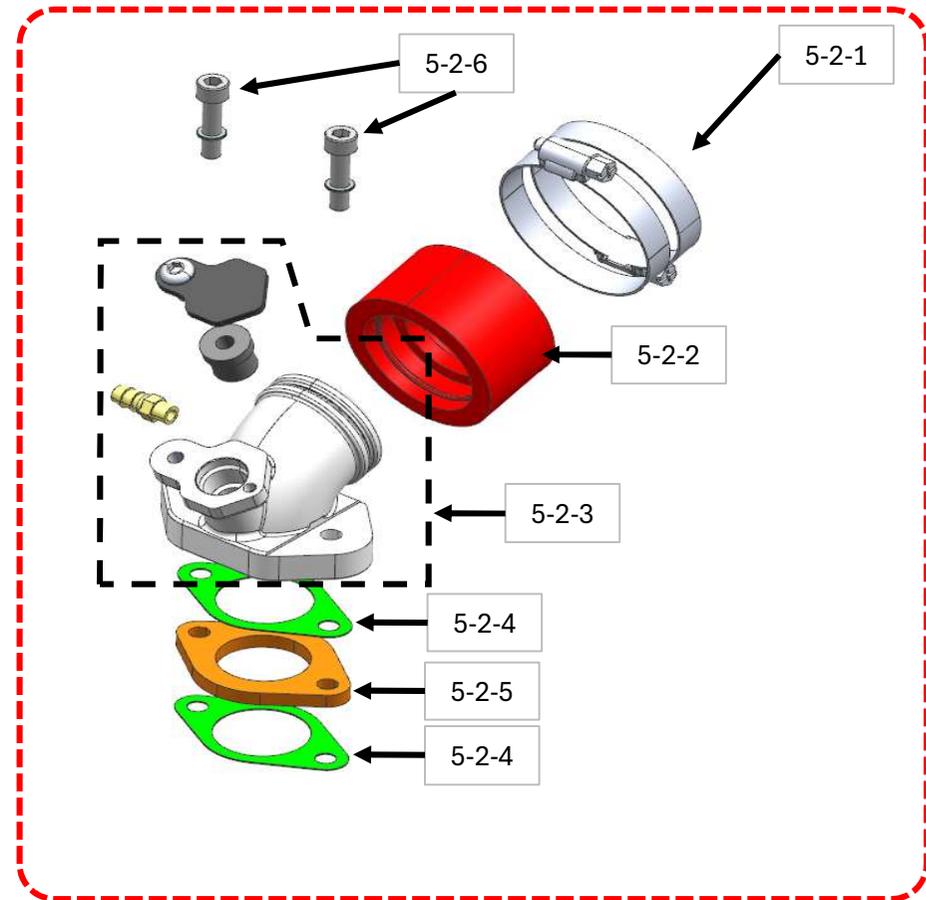

6 Rope starter sub-assembly

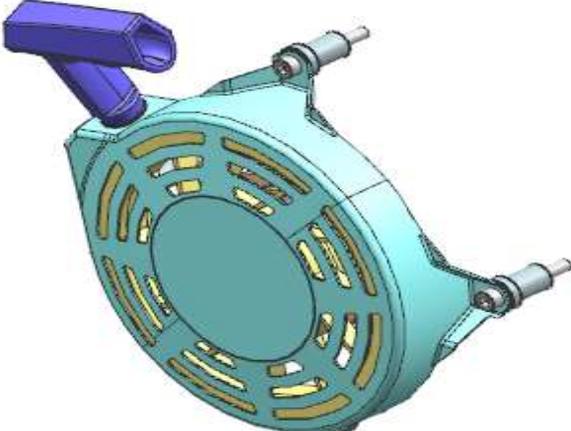



Item	P/N	Part name	Qty
6	600Z001	Rope starter	1
6-1	600A001	Rope starter unit	1
6-2	600B001	Starter rotor	1
6-3	600C001	Rope starter collar	4
6-4	600D001	Screw (BOX-SCB5-35)	4
6-5	600F001	Screw (HFBCM6-12)	3

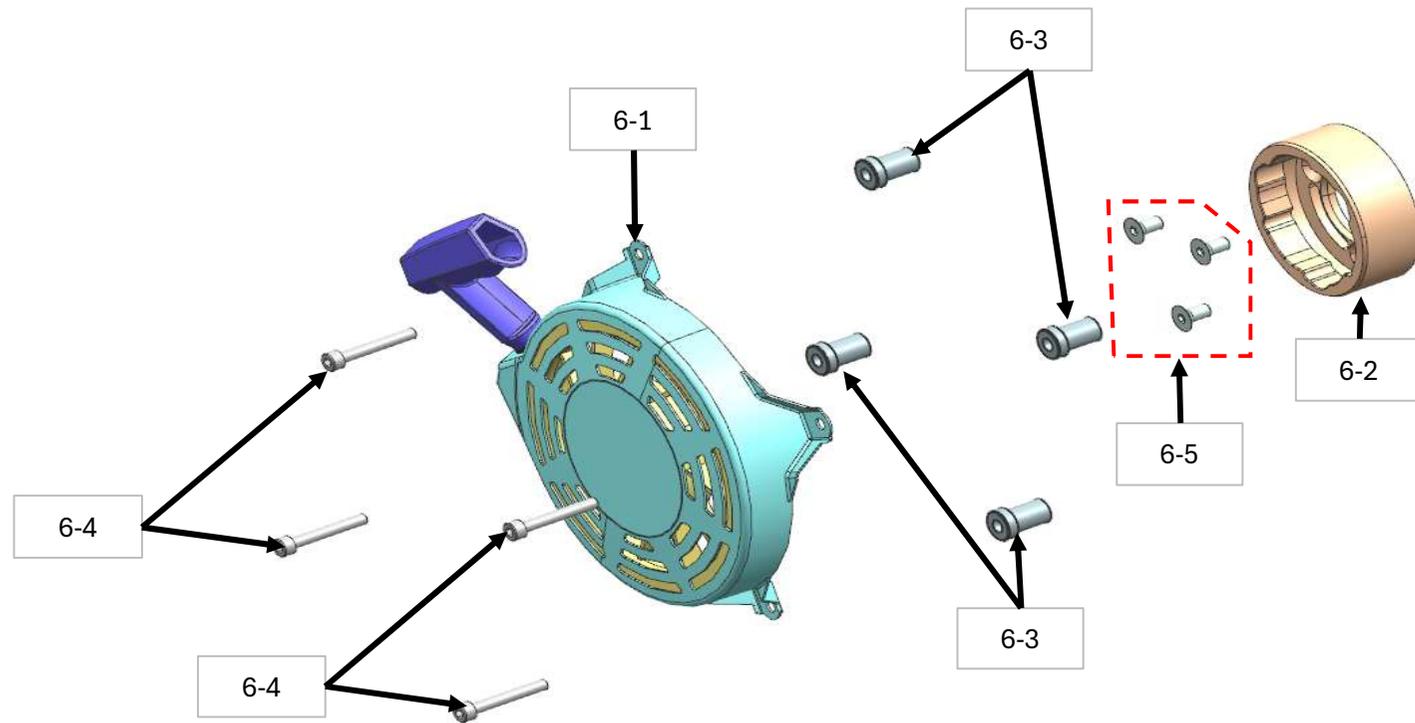



7 Belt transmission sub-assembly

Clutch


Direct drive

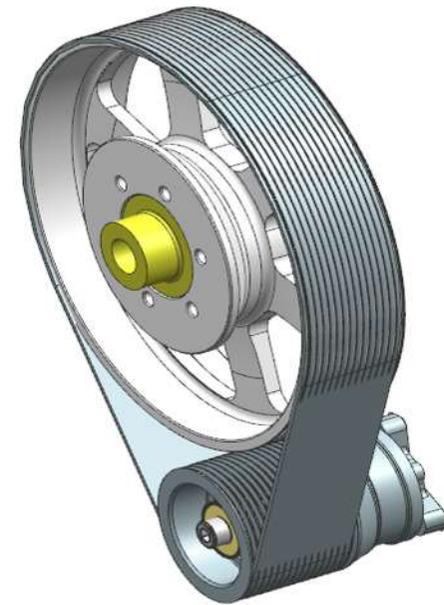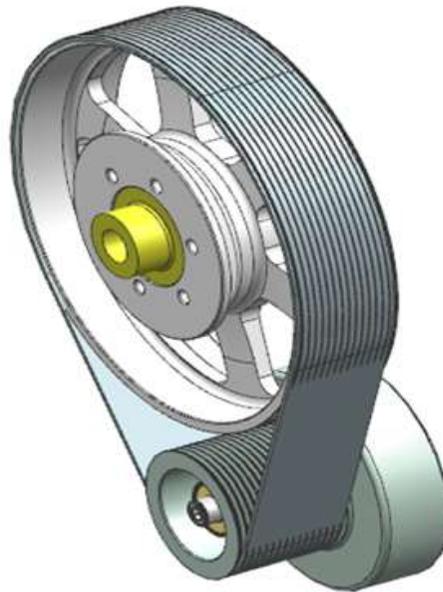


Item	P/N	Part name	Qty
7	700Z001	Belt transmission	1
7-1	700A001	Propeller belt	1
7-2	700B001	Big pulley	1
7-3	700C001	Small pulley	1
7-4	700D001	Clutch	1
7-4-1	700D001-1	Clutch spring	1
7-5	700D002	Direct drive pulley	4
7-6	700E001	Small cap washer	1
7-7	700F001	Big cap washer	1
7-8	700G001	Small pulley screw	1
7-9	700H001	Big pulley screw	1
7-10	700I001	Sprocket screw (M6x12)	3
7-11	700I002	Propeller plate	1

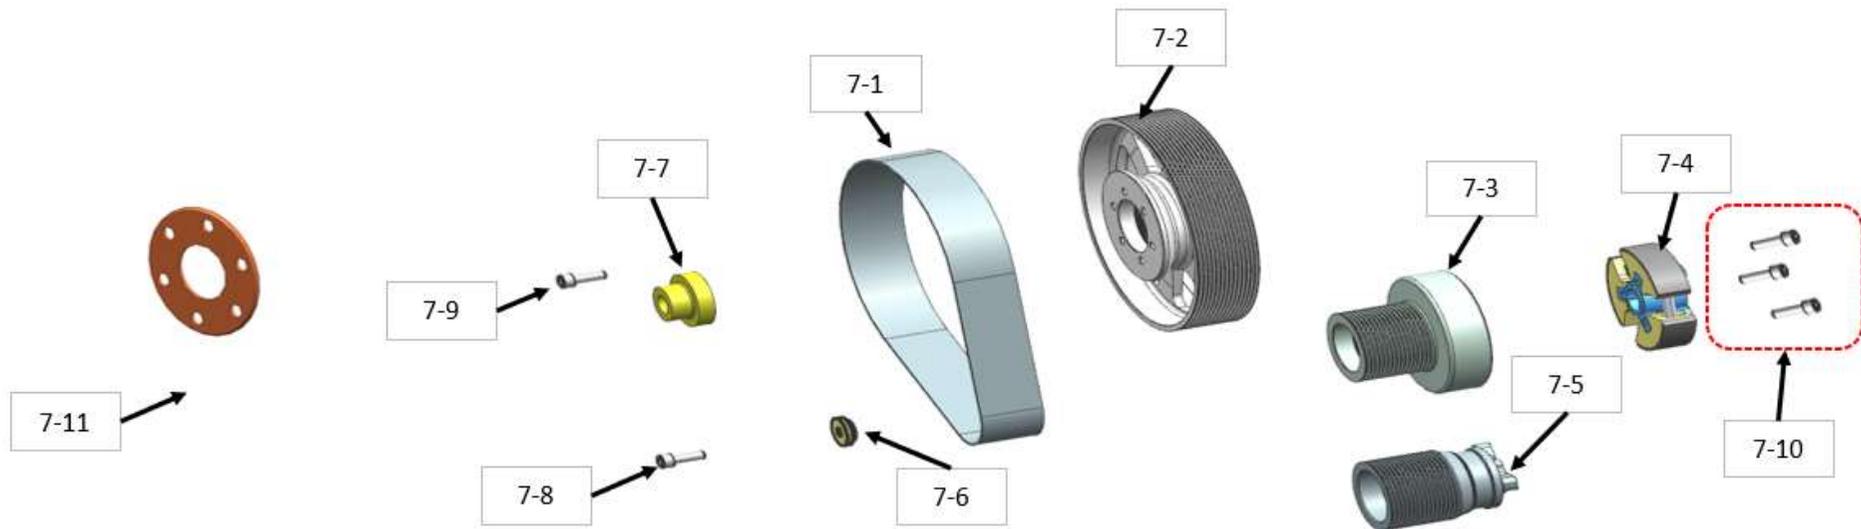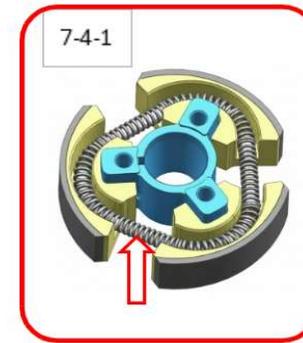


8 Exhaust system - normal version

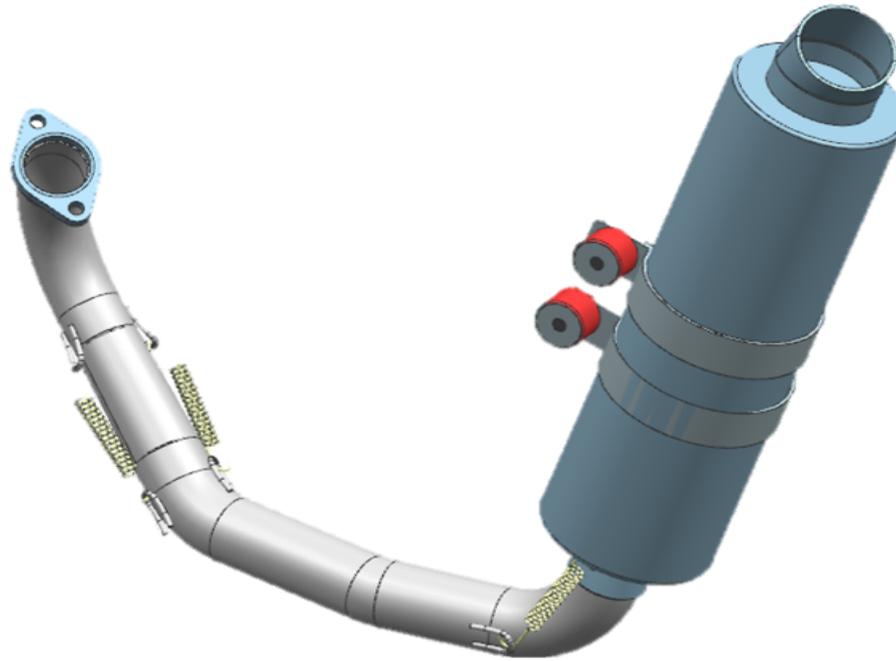


Item	P/N	Part name	Qty
8	800Z001	Exhaust system - normal version	1
8-1	800ZA01	Exhaust front	1
8-2	800ZA02	Silencer	1
8-3	800ZA03	Band	2
8-4	800ZA04	Rubber mount	2
8-5	800ZA05	Exhaust middle	1
8-6	800ZA06	Exhaust spring	4

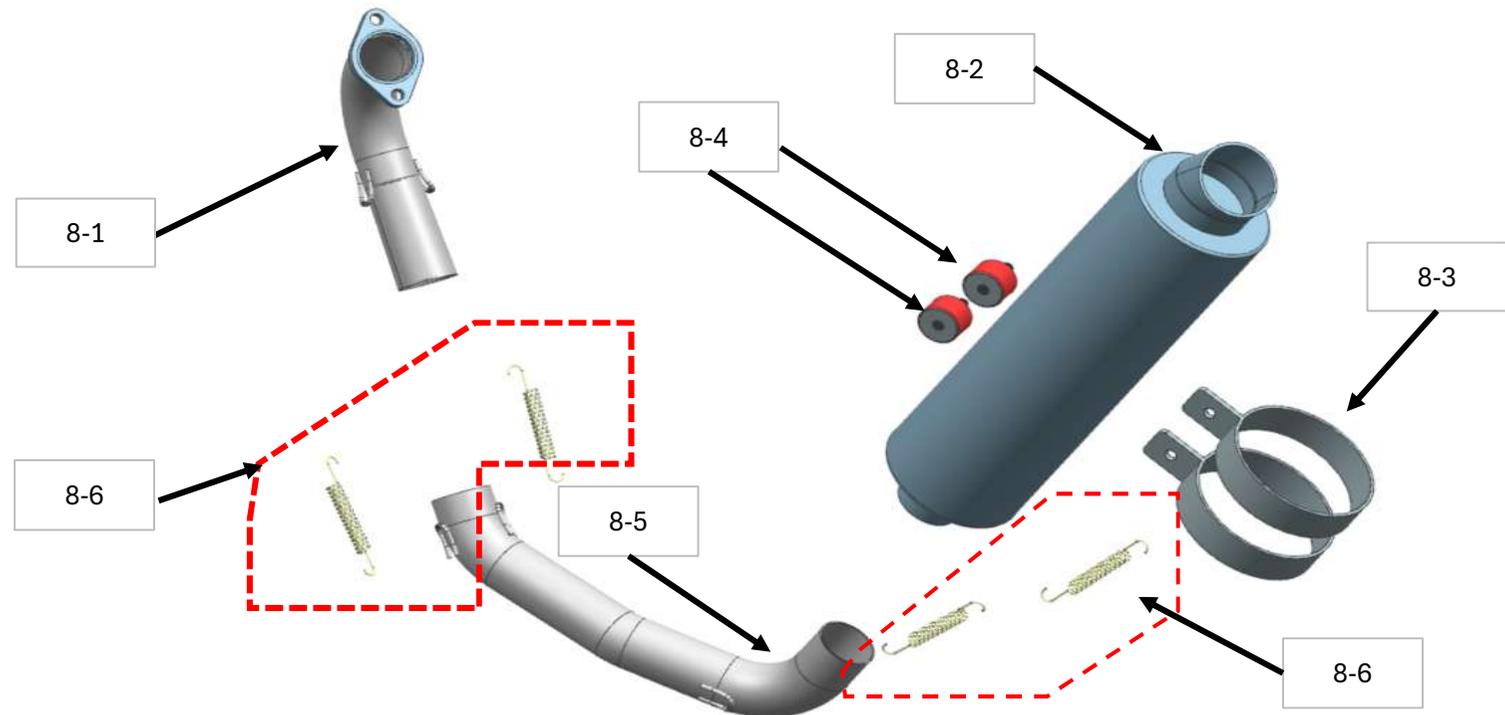

8 Exhaust system - lower version

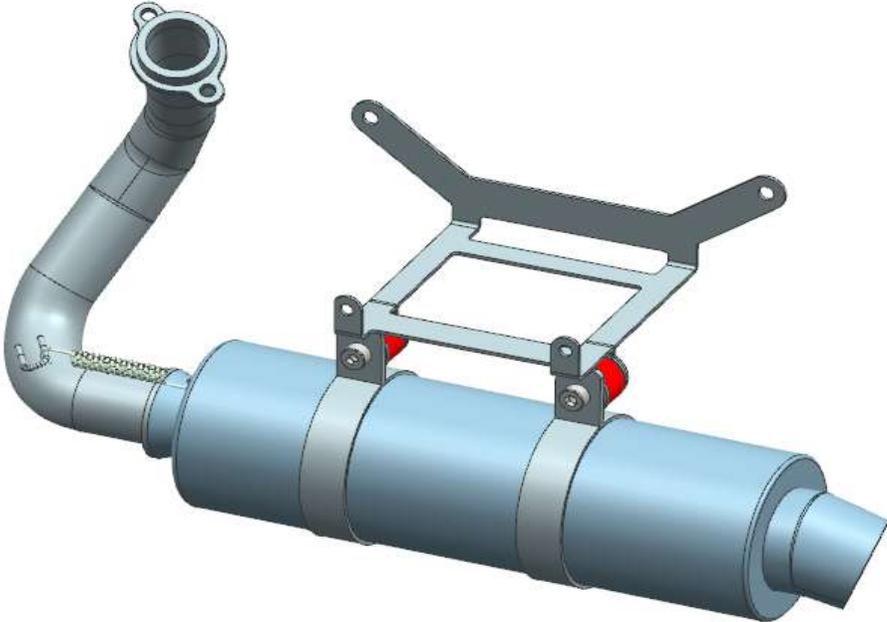


Item	P/N	Part name	Qty
8L	800Z001C	Exhaust system - lower version	1
8L-1	800ZA01C	Exhaust front - lower version	1
8L-2	800ZA02C	Silencer - lower version	1
8-3	800ZA03	Band	2
8-4	800ZA04	Rubber mount	2
8L-5	800ZA05C	Silencer stay - lower version	1
8L-6	800ZA06C	Screw set - lower version	1
8-7	800ZA06	Exhaust spring	2
8-8	800ZA07	Compensator - lower version	1

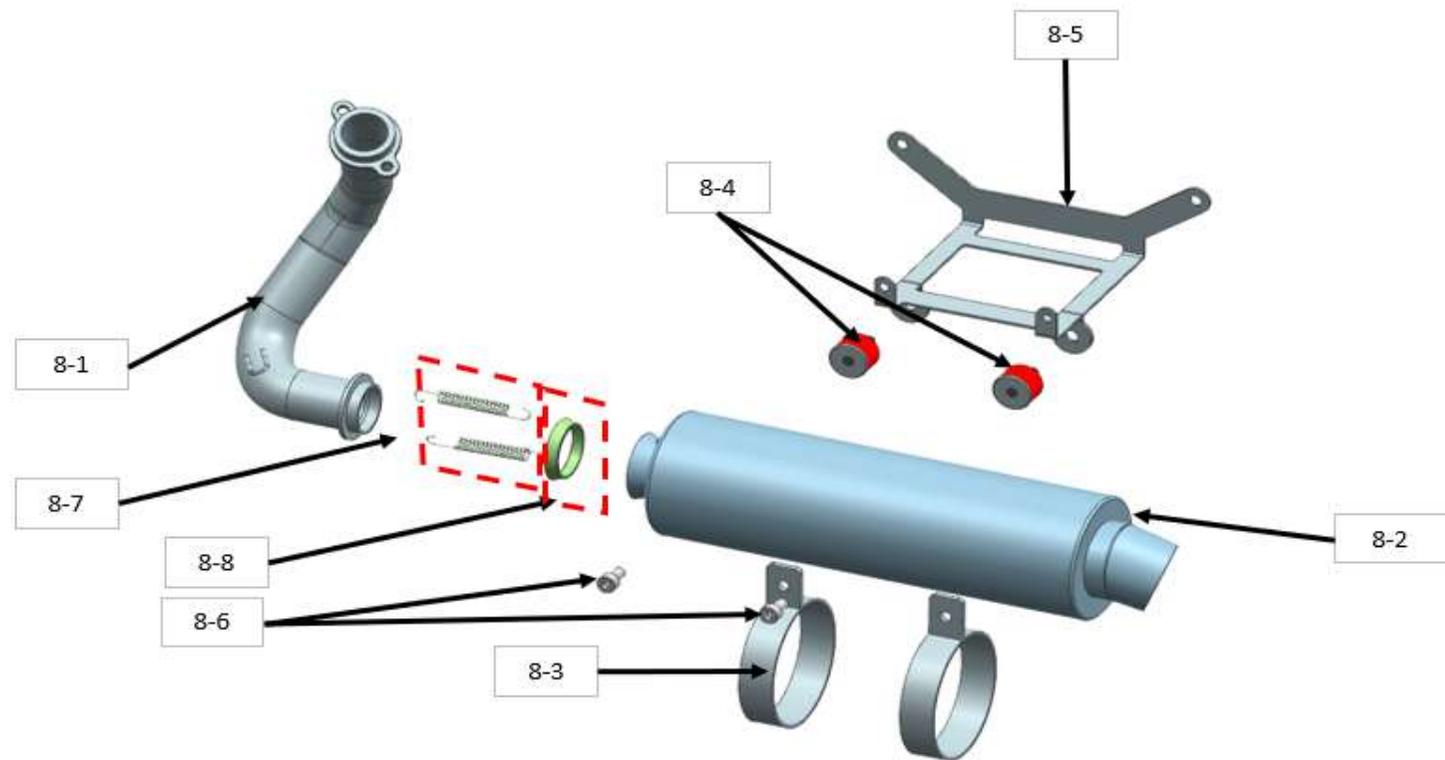


9 Vent tube system




Item	P/N	System name	Qty
9	900Z001	Vent tube system	1
9-1	900A001	Vent tube air filter	1
9-2	900B001	Vent tube	1
9-3	900C001	Tube stay	1
9-4	900D001	Tube clamp	1

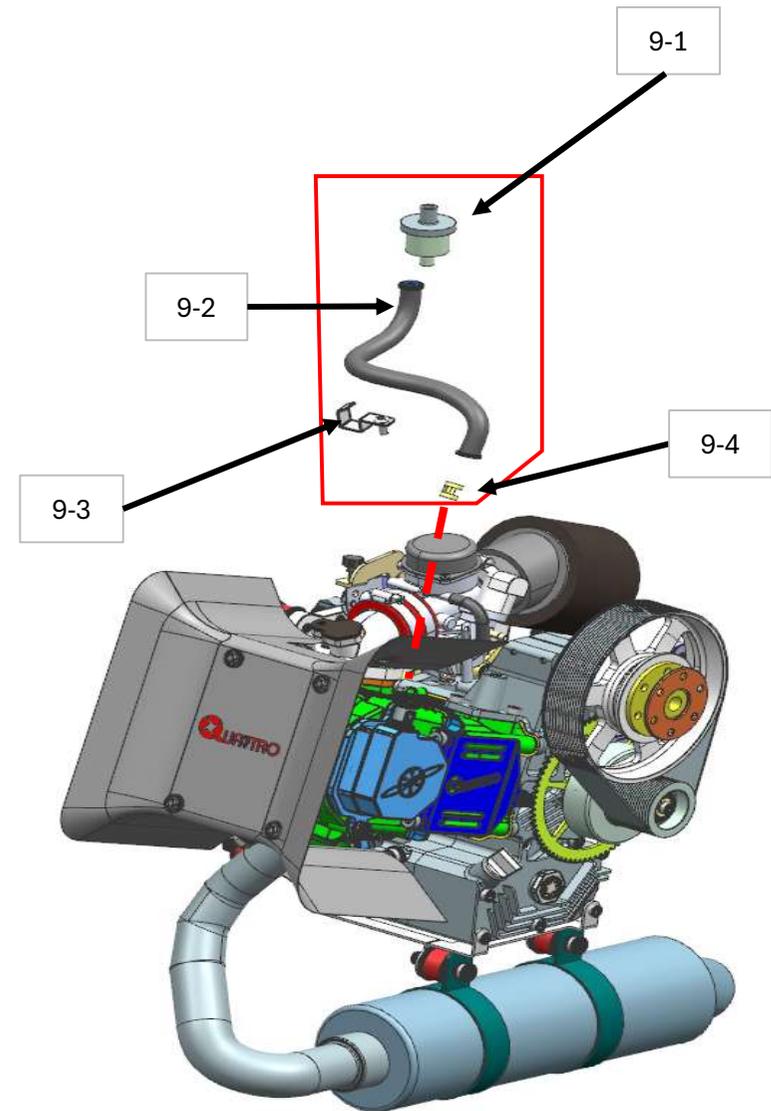

10 Cooling shroud system

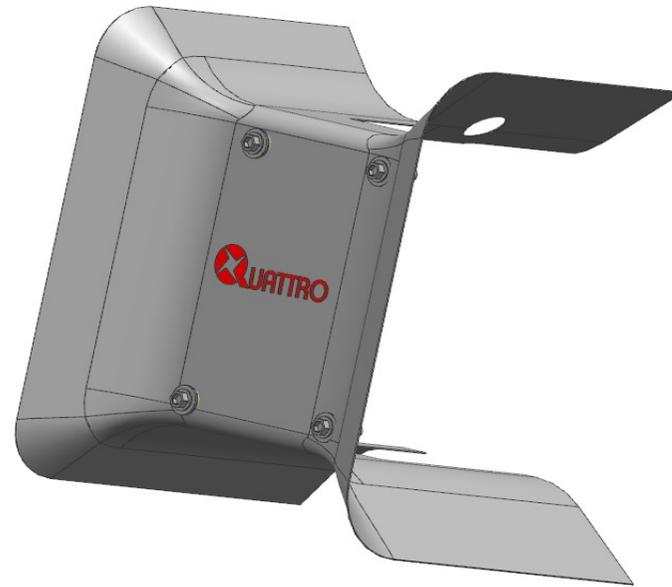

Item	P/N	System name	Qty
10	1000Z001	Cooling shroud system	1
10-1	1000A001	Screw & collar set	1
10-2	1000B001	Cooling shroud unit	1

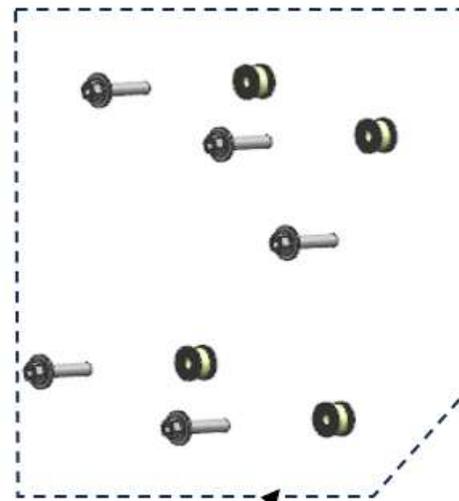

10-1



10-2